


# PRECISION Cable Assemblies

2012 Edition

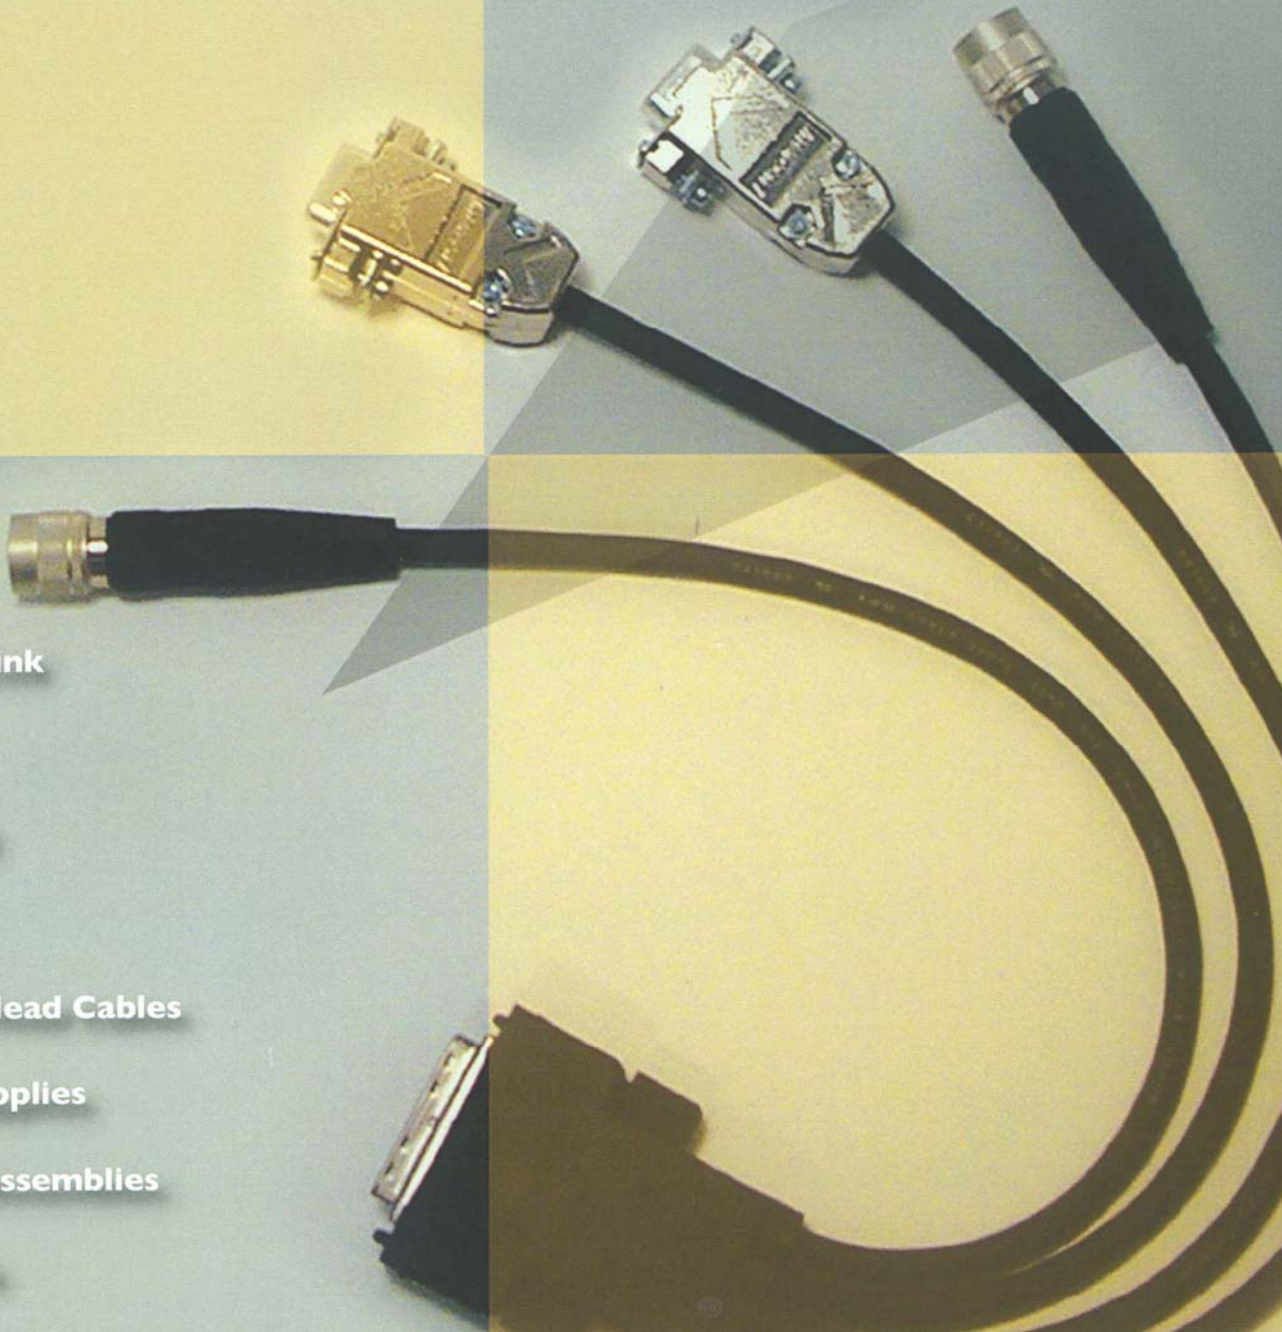

## **Analog**

Page 5

## **Camera Link**

Page 17

## **Gig E**

Page 29

## **IEEE 1394**

Page 35

## **USB**

Page 44

## **Remote Head Cables**

Page 46

## **Power Supplies**

Page 47

## **Custom Assemblies**

Page 52

## **Reference**

Page 53



# **Intercon 1**

*A Division of Nortech Systems*

# CONTENTS

| <u>PART NUMBER</u>          | <u>PAGE</u> | <u>PART NUMBER</u>  | <u>PAGE</u> |
|-----------------------------|-------------|---------------------|-------------|
| ABOUT US 1                  | 2           | IF-CLCP-xx-P        | 26          |
| ABOUT US 2                  | 3           | 38999               | 27          |
| ABOUT US 3                  | 4           | CLOL-xxx*           | 28          |
| BVCP-xx-P                   | 5           | F-GEVP-xx-P         | 29          |
| SVCP-xx-P                   | 6           | F-GEVPT-xx-P        | 30          |
| SVCP*-xx-P                  | 7           | F-GEVVPT-xx-P       | 31          |
| MCS-xx-P                    | 8           | F-GEVPT*-xx-P       | 32          |
| MVCP-xx-S                   | 9           | F-GEVVPT*-xx-P      | 33          |
| PVCS-xx-P                   | 10          | M128P               | 34          |
| VCP-xx-S                    | 11          | MIDAP-xx-PA         | 35          |
| VCS*-xx-P                   | 12          | MIDAP-xx-PB         | 36          |
| VCS*2-xx-P                  | 13          | MIDBP-xx-PB         | 37          |
| VCXS-xx-PJB                 | 14          | IF-MIDAPC-xx-PAC    | 38          |
| VCS-xx-B*                   | 15          | IF-MIDAPT-xx-PAT    | 39          |
| CXP-xx-P                    | 16          | IF-MIDAP-xx-PA      | 40          |
| Camera Link Product Outline | 17          | F-FWBPT-xx-PA6      | 41          |
| Camera Link Cable Options   | 18          | F-FWBPT-xx-PB       | 42          |
| CLCP                        | 19          | F-FWBPT-xx-PBT      | 43          |
| MCLCP                       | 19          | IF-B2PA-xx-PA       | 44          |
| POCLP                       | 20          | GPIO-xx-PS          | 45          |
| POMCLP                      | 20          | RHC*P-**-P          | 46          |
| CLCP*-xx-R                  | 21          | WIPS-xxx-xx         | 47          |
| MCLCP*-xx-R                 | 21          | PSI-xxx-xx          | 48          |
| POCLLP                      | 22          | DPS-xxx-xx          | 49          |
| POCLLP*-xx-R                | 22          | IPS-xxx-xx          | 50          |
| POCLLP-xx-LP                | 23          | Termination options | 51          |
| ECLP-xx-P                   | 24          | Custom Capabilities | 52          |
| X4PT-xx-X4PT                | 25          |                     |             |

## Reference Information

|                           |    |                              |    |
|---------------------------|----|------------------------------|----|
| Camera Link Overmold Dims | 54 | Fire/Flame Tests and Ratings | 57 |
| Circular Conn Orientation | 55 | Flex Testing                 | 58 |
| Cable Guide               | 56 | Cable Track Installation     | 59 |

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)



# About Us

## Divisions of Nortech Systems

Intercon 1, a division of Nortech Systems specializes in machine vision technology and is the premier producer of camera cable and assemblies in the United States. Since 1988 it has led the market in serving machine vision customers providing sophisticated engineering, specialized tools, and methodologies to support groundbreaking vision technology. By helping to develop critical commercial standards it has also remained a conceptual leader within its industry.

Augusta, WI: Nortech's Augusta facility is the manufacturing location for the majority of Intercon 1 products. The Augusta operation builds a wide array of wire and cable assemblies in volumes as small as one and offers rapid response times to satisfy the demands of its customers.



Blue Earth, Mn: Nortech's Aerospace Systems contributes 40 years of specialized experience in Military & Defense projects to Nortech's range of capabilities. Aerospace Systems manufactures military cable assemblies, largely for communications, ground support, testing and training applications.

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# About Us

## Divisions of Nortech Systems

Nortech Systems is a full-service EMS provider of wire and cable assemblies, printed circuit board assemblies, diagnostic repair and integration services including, higher-level box builds for a wide range of industries. Markets served include medical, automotive, aerospace, computer peripheral, commercial, telecom, government and consumer. Nortech Systems has a range of specialized, high-tech facilities used for customized design, manufacture, testing and repair of its solutions.



Bemidji, Mn: Nortech Systems Bemidji specializes in complex wire harness and cable assemblies. They are a provider of innovative ideas and solutions and offer a full breadth of services. The Bemidji, MN operation has experience building applications in a broad range of industries including medical and industrial markets.

Merrifield, MN: From the design phase through order fulfillment we specialize in printed circuit card assembly, final box assembly, and a full suite of test services for a diverse customer base. Our capabilities include fully automated SMT and PTH, semi automated through hole, and special lines using both technologies. We have a broad range of experience building applications in various industries including aerospace / defense, agriculture, oil / gas as well as medical and industrial markets.



Monterey, Mexico: This low cost alternative for high volume cable assemblies allows Nortech Systems the versatility needed to offer competitive solutions in a global market. This manufacturing location works hand in hand with our Bemidji and Augusta factories.

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# About Us

## Divisions of Nortech Systems



This facility offers a complete manufacturing solution for the Medical and Life Sciences industry. The plant in Milaca specializes in producing finished medical devices under the highest FDA quality systems.

Nortech Life Sciences is capable of managing one top level part number. Nortech Life Sciences then manages the complete supply chain producing finished devices in a LEAN heavily regulated environment.

Mankato, MN: From the design phase through order fulfillment we specialize in printed circuit card assembly, final box assembly, and a full suite of test services for a diverse customer base. Our capabilities include fully automated SMT and PTH, semi automated through hole, and special lines using both technologies. We have a broad range of experience building applications in various industries including aerospace / defense, agriculture, oil / gas as well as medical and industrial markets.



**Custom variations available. Please contact customer service for additional information.**  
**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# Analog Video


## BNC Video Cable – BVCP-xx-P

### Product Outline

This high performance 75 Ohm BNC cable uses a robust RG59, controlled impedance cable to provide quality video images even at greater distances.

Overmolding provides superior strain relief and minimizes shorts and stress at the terminations through repeated installations or motion and vibration.

Assemblies are also available with a mini coax, RG174, or with multiple BNC breakouts for carrying full RGBS signals in one assembly. Please contact customer service for details.

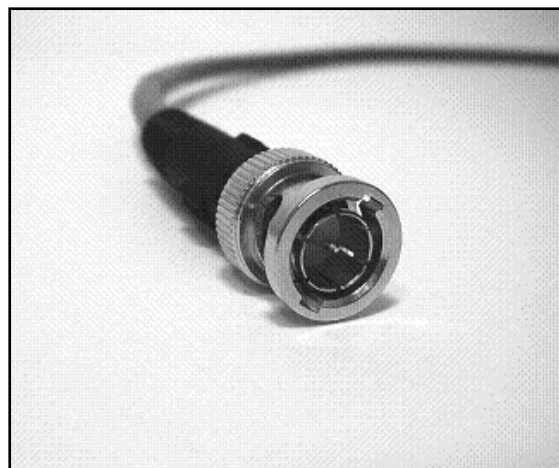

### Main Product Specifications

#### Features

- PVC jacket
- Rugged high performance cable
- 75 Ohm signal
- Overmolded connectors

#### Cable Specifications

|                  |                      |
|------------------|----------------------|
| Overall Diameter | .240 Inches          |
| Max Temperature  | -40 to +75 Degrees C |
| Jacket Color     | Blue                 |
| UL Rated         | Yes                  |
| Min. Bend Radius | 2.50 Inches          |

#### Primary Components

|             |                                 |
|-------------|---------------------------------|
| Cable       | Single Coaxial conductor – RG59 |
| Connector A | 75 Ohm BNC Plug                 |
| Connector B | 75 Ohm BNC Plug                 |

### Ordering Information

| Order Number | Length |       | Description       |
|--------------|--------|-------|-------------------|
|              | Meters | Feet  |                   |
| BVCP-1.0-P   | 1.0    | 3.28  | Analog CCXC Style |
| BVCP-2.0-P   | 2.0    | 6.58  | Analog CCXC Style |
| BVCP-3.0-P   | 3.0    | 9.84  | Analog CCXC Style |
| BVCP-5.0-P   | 5.0    | 16.94 | Analog CCXC Style |

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)



# Analog Video

## High Performance S-Video – SVCP-xx-P

### Product Outline

This dual, side by side, 75 Ohm controlled impedance coaxial cable assemblies provides accurate signal transmission with a tolerance of +/- 4 ohms to ensure high-quality video images.

The flat cable design allows for both pliability and high flex life.

Overmolded connectors increase the rugged durability with superior strain relief.

Assemblies are also available with right angle overmolds.



### Main Product Specifications

#### Features

- Industrial overmolded interfaces
- Flexible YC cable
- Precision 75 Ohm video conductors
- Right angle interfaces available

#### Cable Specifications

|                  |                    |
|------------------|--------------------|
| Overall Diameter | .115 x .232 Inches |
| Max Temperature  | 80 Degrees C       |
| Jacket Color     | Black              |
| UL/CSA Rated     | Yes                |
| Flame Rating     | VW-1               |

#### Primary Components

|             |                                   |
|-------------|-----------------------------------|
| Cable       | High Performance Siamese YC Cable |
| Connector A | 4 Pos Mini Din Plug               |
| Connector B | 4 Pos Mini Din Plug               |

### Ordering Information

| Order Number | Length |      | Description                   |
|--------------|--------|------|-------------------------------|
|              | Meters | Feet |                               |
| SVCP-0.31-P  | 0.31   | 1    | High Performance Flat S-Video |
| SVCP-0.92-P  | 0.92   | 3    | High Performance Flat S-Video |
| SVCP-1.8-P   | 1.8    | 6    | High Performance Flat S-Video |
| SVCP-3.05-P  | 3.05   | 10   | High Performance Flat S-Video |
| SVCP-4.6-P   | 4.6    | 15   | High Performance Flat S-Video |

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# Analog Video

## High Performance Right Angle S-Video – SVCP\*-xx-P

### Product Outline

This dual, side by side, 75 Ohm controlled impedance coaxial cable provides accurate signal transmission with a tolerance of  $\pm 4$  ohms to ensure high-quality video images.

The flat cable design allows for both pliability and high flex life.

Overmolded connectors increase the rugged durability with superior strain relief.

The unique right angle overmold reduces stress and increases durability in space restricted applications.



### Main Product Specifications

#### Features

- Industrial overmolded interfaces
- Flexible YC cable
- Precision 75 Ohm video conductors
- Right angles available in Up, Down, Left, or Right

| Cable Specifications |                    |
|----------------------|--------------------|
| Overall Diameter     | .115 x .232 Inches |
| Max Temperature      | 80 Degrees C       |
| Jacket Color         | Black              |
| UL/CSA Rated         | Yes                |
| Flame Rating         | VW-1               |

| Primary Components |                                   |
|--------------------|-----------------------------------|
| Cable              | High Performance Siamese YC Cable |
| Connector A        | 4 Pos Mini Din Plug               |
| Connector B        | 4 Pos Mini Din Plug               |

### Ordering Information

| Order Number | Length |      | Description                      |
|--------------|--------|------|----------------------------------|
|              | Meters | Feet |                                  |
| SVCP*-0.31-P | 0.31   | 1    | High Performance Flat S-Video RA |
| SVCP*-0.92-P | 0.92   | 3    | High Performance Flat S-Video RA |
| SVCP*-1.8-P  | 1.8    | 6    | High Performance Flat S-Video RA |
| SVCP*-3.05-P | 3.05   | 10   | High Performance Flat S-Video RA |
| SVCP*-4.6-P  | 4.6    | 15   | High Performance Flat S-Video RA |

Please replace \* with "U" for up, "D" for down, "R" for right, or "L" for left.

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)



# Analog Video

## CCXC Style Cable – MCS-xx-P

### Product Outline

This cable assembly was designed for use with Sony medical cameras. They are capable of transmitting high quality video signals through tough, demanding environments where failures are unacceptable.

Rugged TPE overmolding provides the best strain relief to ensure continued performance through repeated motion, vibration, or installations.

This assembly is available in several cable options as well as right angle overmolding. Please contact customer service.



### Main Product Specifications

#### Features

- Overmolded strain relief
- 75 Ohm video signals
- High Flex and Teflon versions are available
- Right angle overmolds are available

| Cable Specifications |              |
|----------------------|--------------|
| Overall Diameter     | .270 Inches  |
| Max Temperature      | 80 Degrees C |
| Jacket Color         | Black        |
| UL/CSA Rated         | Yes          |
| Min. Bend Radius     | 4.05 Inches  |
| Flame Rating         | VW-1         |

| Primary Components |                                               |
|--------------------|-----------------------------------------------|
| Cable              | 4 75 Ohm Coax conductors,<br>4 Discrete wires |
| Connector A        | 12 Position Circular Plug w/<br>Sockets       |
| Connector B        | 12 Position Circular Plug w/<br>Pins          |

### Ordering Information

| Order Number | Length |       | Description                 |
|--------------|--------|-------|-----------------------------|
|              | Meters | Feet  |                             |
| MCS-2.0-P    | 2.0    | 6.56  | Medical CCXC Style Assembly |
| MCS-3.0-P    | 3.0    | 9.84  | Medical CCXC Style Assembly |
| MCS-5.0-P    | 5.0    | 16.4  | Medical CCXC Style Assembly |
| MCS-10-P     | 10     | 32.8  | Medical CCXC Style Assembly |
| MCS-15-P     | 15     | 49.21 | Medical CCXC Style Assembly |

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# Analog Video

## High Flex CCXC Style Cable – MVCP-xx-S

### Product Outline

These high flex cable assemblies offer an industrial solution for motion applications requiring a robust CCXC style cable. The combination of a high flex cable and overmolded interfaces offer a durable solution designed to sustain abuse while transmitting high quality 75 Ohm video signals.

These assemblies can be produced in a variety of options including standard and Teflon cable types to best fit your application.

Right angle and low profile right angle assemblies are also available.



### Main Product Specifications

#### Features

- High Flex cable
- Overmolded connectors
- Controlled 75 Ohm Impedance video conductors
- Superior long length performance
- RoHS Compliant versions are available
- Standard lengths are available
- Right angle molds are available

| Cable Specifications |              |
|----------------------|--------------|
| Overall Diameter     | .227 Inches  |
| Max Temperature      | 80 Degrees C |
| Jacket Color         | Black        |
| UL/CSA Rated         | Yes          |
| Min. Bend Radius     | 2.27nches    |
| Flame Rating         | VW-1         |

| Primary Components |                                               |
|--------------------|-----------------------------------------------|
| Cable              | 4 75 Ohm Coax conductors,<br>4 Discrete wires |
| Connector A        | 12 Position Circular Plug w/<br>Sockets       |
| Connector B        | 12 Position Circular Plug w/ Pins             |

### Ordering Information

| Order Number | Length |       | Description                 |
|--------------|--------|-------|-----------------------------|
|              | Meters | Feet  |                             |
| MVCP-1.0-S   | 1.0    | 3.28  | High Flex Analog CCXC Style |
| MVCP-2.0-S   | 2.0    | 6.58  | High Flex Analog CCXC Style |
| MVCP-3.0-S   | 3.0    | 9.84  | High Flex Analog CCXC Style |
| MVCP-5.0-S   | 5.0    | 16.94 | High Flex Analog CCXC Style |
| MVCP-10-S    | 10     | 32.81 | High Flex Analog CCXC Style |

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# Analog Video

## Pulnix Style Video Cable – PVCS-xx-P

### Product Outline

This CCXC style cable was designed for use with Pulnix cameras. Utilizing our standard CCXC style bulk cable, 89238A, these dependable assemblies have successfully transmitted high quality video images at lengths up to 65 meters.

With an exclusive industrial overmold from Intercon 1, these assemblies are a proven robust solution.

Assemblies are also available in high flex and Teflon versions. MPVCS-xx-P Denotes High Flex version



### Main Product Specifications

#### Features

- Overmold connectors
- 75 Ohm video conductors
- Exceptional quality over long distances
- RoHS Compliant versions are available
- High flex versions are available
- Right angle overmolds are available

| Cable Specifications |              |
|----------------------|--------------|
| Overall Diameter     | .270 Inches  |
| Max Temperature      | 80 Degrees C |
| Jacket Color         | Black        |
| UL/CSA Rated         | Yes          |
| Min. Bend Radius     | 4.05 Inches  |
| Flame Rating         | VW-1         |

| Primary Components |                                               |
|--------------------|-----------------------------------------------|
| Cable              | 4 75 Ohm Coax conductors,<br>4 Discrete wires |
| Connector A        | 12 Pos Circular Plug w/<br>Sockets            |
| Connector B        | 12 Pos Circular Plug w/ Pins                  |

### Ordering Information

| Order Number | Length |      | Description        |
|--------------|--------|------|--------------------|
|              | Meters | Feet |                    |
| PVCS-2.0-P   | 2.0    | 6.5  | Pulnix Style Cable |
| PVCS-3.0-P   | 3.0    | 9.8  | Pulnix Style Cable |
| PVCS-5.0-P   | 5.0    | 16.4 | Pulnix Style Cable |
| PVCS-10-P    | 10     | 32.8 | Pulnix Style Cable |
| PVCS-15-P    | 15     | 49.2 | Pulnix Style Cable |

\*Add M for High Flex assembly.

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425

P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# Analog Video

## CCXC Style – VCP-xx-S

### Product Outline

These robust camera interface assemblies incorporate a controlled impedance 75 Ohm video cable, precision assembly techniques, and resilient industrial grade TPE overmolding to provide the ultimate in dependable CCXC connections.

These assemblies can be produced in a variety of options including high flex and Teflon cable types to best fit your application.

Right angle and low profile right angle assemblies are also available.



### Main Product Specifications

#### Features

- Overmolded connectors
- Controlled Impedance 75 Ohm video conductors
- Superior long length performance
- RoHS Compliant versions are available
- Standard lengths are available

#### Cable Specifications

|                  |              |
|------------------|--------------|
| Overall Diameter | .270 Inches  |
| Max Temperature  | 80 Degrees C |
| Jacket Color     | Black        |
| UL/CSA Rated     | Yes          |
| Min. Bend Radius | 4.05 Inches  |
| Flame Rating     | VW-1         |

#### Primary Components

|             |                                        |
|-------------|----------------------------------------|
| Cable       | 4 Coax conductors,<br>4 Discrete wires |
| Connector A | 12 Pos Circular Plug w/ Sockets        |
| Connector B | 12 Pos Circular Plug w/ Pins           |

### Ordering Information

| Order Number | Length |       | Description       |
|--------------|--------|-------|-------------------|
|              | Meters | Feet  |                   |
| VCP-1.0-S    | 1.0    | 3.28  | Analog CCXC Style |
| VCP-2.0-S    | 2.0    | 6.58  | Analog CCXC Style |
| VCP-3.0-S    | 3.0    | 9.84  | Analog CCXC Style |
| VCP-5.0-S    | 5.0    | 16.94 | Analog CCXC Style |
| VCP-10-S     | 10     | 32.81 | Analog CCXC Style |

\*Add M for High Flex assembly.

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)



# Analog Video

## Right Angle CCXC Style – VCS\*-xx-P

### Product Outline

These industrial CCXC style assemblies offer a unique right angle overmold for applications requiring an immediate turn behind the interface. The common configuration consists of a right angle on the camera (socket) end and an overmolded straight connector on the equipment end. However both connectors are available with a right angle.

These assemblies can be produced in a variety of options including high flex and Teflon cable types to best fit your application.


Orientations are available in up, down, left, and right.



### Main Product Specifications

#### Features

- Right angle overmolded connectors
- Controlled Impedance 75 Ohm video conductors
- Superior long length performance
- RoHS Compliant versions are available

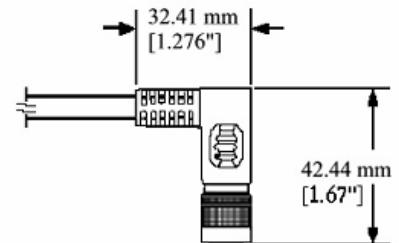

| Cable Specifications |              |
|----------------------|--------------|
| Overall Diameter     | .270 Inches  |
| Max Temperature      | 80 Degrees C |
| Jacket Color         | Black        |
| UL/CSA Rated         | Yes          |
| Min. Bend Radius     | 4.05 Inches  |
| Flame Rating         | VW-1         |

| Primary Components |                                        |
|--------------------|----------------------------------------|
| Cable              | 4 Coax conductors,<br>4 Discrete wires |
| Connector A        | 12 Pos Circular Plug W /<br>Sockets    |
| Connector B        | 12 Pos Circular Plug W / Pins          |

### Ordering Information

| Order Number | Length |       | Description                   |
|--------------|--------|-------|-------------------------------|
|              | Meters | Feet  |                               |
| VCS*-1.0-P   | 1.0    | 3.28  | Right Angle Analog CCXC Style |
| VCS*-2.0-P   | 2.0    | 6.58  | Right Angle Analog CCXC Style |
| VCS*-3.0-P   | 3.0    | 9.84  | Right Angle Analog CCXC Style |
| VCS*-5.0-P   | 5.0    | 16.94 | Right Angle Analog CCXC Style |
| VCS*-10-P    | 10     | 32.81 | Right Angle Analog CCXC Style |

Please replace \* with "U" for up, "D" for down, "R" for right, or "L" for left.

\*Add M for High Flex assembly.

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425

P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# Analog Video

## Low Profile Right Angle CCXC Style – VCS\*2-xx-P

### Product Outline

These industrial CCXC style assemblies offer a unique low profile right angle overmold for applications requiring an immediate turn behind the interface. The low profile overmold allows for a robust solution for space restricted applications eliminating the need for tight bends which can lead to failure.

These assemblies can be produced in a variety of options including high flex, and Teflon cable types to best fit your application.

Orientations are available in up, down, left, and right.




### Main Product Specifications

#### Features

- Low profile right angle overmolded connectors
- Controlled Impedance 75 Ohm video conductors
- Superior long length performance
- RoHS Compliant versions are available

#### Cable Specifications

|                  |              |
|------------------|--------------|
| Overall Diameter | .270 Inches  |
| Max Temperature  | 80 Degrees C |
| Jacket Color     | Black        |
| UL/CSA Rated     | Yes          |
| Min. Bend Radius | 4.05 Inches  |
| Flame Rating     | VW-1         |

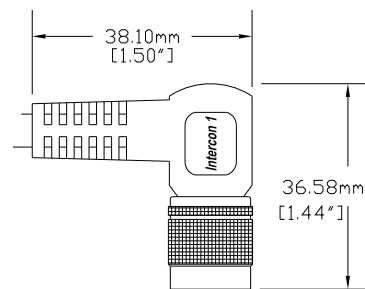

#### Primary Components

|             |                                        |
|-------------|----------------------------------------|
| Cable       | 4 Coax conductors,<br>4 Discrete wires |
| Connector A | 12 Pos Circular Plug w/ Sockets        |
| Connector B | 12 Pos Circular Plug w/ Pins           |

### Ordering Information

| Order Number | Length |       | Description                               |
|--------------|--------|-------|-------------------------------------------|
|              | Meters | Feet  |                                           |
| VCS*2-1.0-P  | 1.0    | 3.28  | Low Profile Right Angle Analog CCXC Style |
| VCS*2-2.0-P  | 2.0    | 6.58  | Low Profile Right Angle Analog CCXC Style |
| VCS*2-3.0-P  | 3.0    | 9.84  | Low Profile Right Angle Analog CCXC Style |
| VCS*2-5.0-P  | 5.0    | 16.94 | Low Profile Right Angle Analog CCXC Style |
| VCS*2-10-P   | 10     | 32.81 | Low Profile Right Angle Analog CCXC Style |

Please replace \* with "U" for up, "D" for down, "R" for right, or "L" for left.

\*Add M for High Flex assembly

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425

P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# Analog Video

## CCXC Style Extension Cable Flange Mount – VCX\*-xx-PJB

### Product Outline

These assemblies allow the mounting of a 12 position circular connector on a panel from either the front or from the inside of the equipment. The bracket is mountable on either the socket end or the pin end of the cable depending upon your specific needs.

Assemblies are also available with a mini coax, RG174, or with multiple BNC breakouts for carrying full RGBS signals in one assembly. Please contact customer service for details.

Intercon 1 quality is maintained with the use of our high performance 75 ohm CCXC cable and custom overmolded connectors. Assemblies are available without the bracket and with high flex or Teflon cables.



### Main Product Specifications

#### Features

- Bracket for easy mounting
- Overmolded connectors
- RoHS Compliant versions are available
- Superior long length performance

| Cable Specifications |              |
|----------------------|--------------|
| Overall Diameter     | .270 Inches  |
| Max Temperature      | 80 Degrees C |
| Jacket Color         | Black        |
| UL/CSA Rated         | Yes          |
| Min. Bend Radius     | 4.05 Inches  |
| Flame Rating         | VW-1         |

| Primary Components |                                        |
|--------------------|----------------------------------------|
| Cable              | 4 Coax conductors,<br>4 Discrete wires |
| Connector A        | 12 Pos Circular Plug<br>w/ Sockets     |
| Connector B        | 12 Pos Circular Plug<br>w/ Pins        |

### Ordering Information

| Order Number  | Length |      | Description                  |
|---------------|--------|------|------------------------------|
|               | Meters | Feet |                              |
| VCXS-0.2-PJB  | 0.2    | 0.66 | Plug w/Sockets – Jack w/Pins |
| VCXS-5.0-PJB  | 5.0    | 16.4 | Plug w/Sockets – Jack w/Pins |
| VCXP -0.2-SJB | 0.2    | 0.66 | Plug w/Pins – Jack w/Sockets |
| VCXP -5.0-SJB | 5.0    | 16.4 | Plug w/Pins – Jack w/Sockets |

Custom variations are available. Please contact customer service for additional information.

\*Add M for High Flex assembly

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# Analog Video


## CCXC Style – VCS-xx-B\*

### Product Outline

This video breakout cable consists of a standard 12 pos circular connector with BNC video output connectors, DC power leads, and chassis ground.

In addition to the overmolded connectors, the breakout junction is also overmolded. This provides both a clean, professional appearance as well as eliminates the potential failure point with increased strain relief.

Configurations are available with 1-5 BNC's, S-Video, or RCA breakouts. High flex, double shielded, and Teflon versions are available.

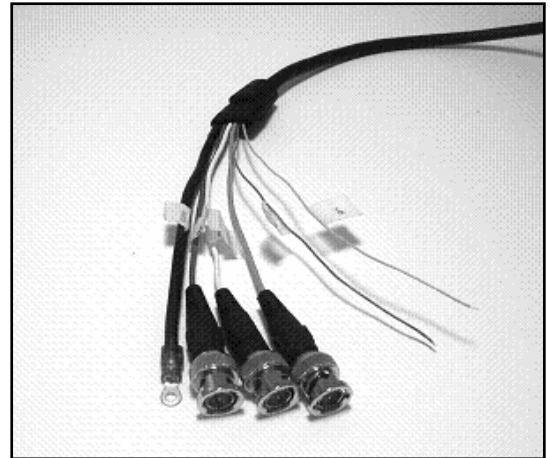

### Main Product Specifications

#### Features

- Overmolded connectors
- Overmolded breakouts
- Multiple breakout variations
- 75 Ohm video
- Multiple jacketing options to fit your application

#### Cable Specifications

|                  |              |
|------------------|--------------|
| Overall Diameter | .270 Inches  |
| Max Temperature  | 80 Degrees C |
| Jacket Color     | Black        |
| UL/CSA Rated     | Yes          |
| Min. Bend Radius | 4.05 Inches  |
| Flame Rating     | VW-1         |

#### Primary Components

|             |                                       |
|-------------|---------------------------------------|
| Cable       | 75 Ohm coax,<br>24 AWG discrete wires |
| Connector A | 12 Position Circular                  |
| Connector B | 75 Ohm BNC                            |

### Ordering Information

| Order Number | Description                    |
|--------------|--------------------------------|
| VCS-XX-B1    | 12 Pos. Breakout to 1 BNC, PWR |
| VCS-XX-B2    | 12 Pos. Breakout to 2 BNC, PWR |
| VCS-XX-B3    | 12 Pos. Breakout to 3 BNC, PWR |
| VCS-XX-B4    | 12 Pos. Breakout to 4 BNC, PWR |
| VCS-XX-B5    | 12 Pos. Breakout to 5 BNC, PWR |

XX- is replaced by the length in Meters.

\*Add M for High Flex assembly

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)



## CoaXPress – F-CXP-xx-P

### Product Outline

CoaXpress is a recently developed camera standard utilizing a single coax cable for transfer rates of up to 6.25 Gbps. Utilizing precision 75 ohm impedance and 100% sweep tested cable, Intercon 1 high-flex CoaXPress cable assemblies are certified J11A to be CoaXPress compliant

By combining materials like crush resistant gas-injected polyethylene compound that reduces attenuation and extends operating band width. Intercon 1 provides the most robust industrial assemblies available. These assemblies are designed to function within a broad range of environmental conditions and may be used in either static or flex applications.



### Main Product Specifications

#### Features

- Designed to surpass 1 million flex cycles
- Precision 75 ohm impedance
- 100% sweep tested

#### Cable Specifications

| Cable Specifications |              |
|----------------------|--------------|
| Overall Diameter     | .242 Inches  |
| Max Temperature      | 60 Degrees C |
| Jacket Color         | Black        |
| Min. Bend Radius     | 2.42 Inches  |

#### Primary Components

| Primary Components |                                 |
|--------------------|---------------------------------|
| Cable              | Single Coaxial conductor – RG59 |
| Connector A        | 75 Ohm BNC Plug                 |
| Connector B        | 75 Ohm BNC Plug                 |

### Ordering Information

| Order Number | Description               |
|--------------|---------------------------|
| F-CXP-xx-P   | High Flex CoaXpress cable |

Replace xx with length in meters

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

## Certified High Flex Camera Link

### Product Outline

Intercon 1 high-flex cable construction adheres to Camera Link specifications and are Certified to Camera Link Committee Standards. By combining the most advanced materials and sophisticated building techniques, Intercon 1 provides the most robust industrial assemblies available. These assemblies are designed to function within a broad range of temperature and environmental conditions and may be used in either static or flex applications.

Intercon 1's high performance right angle Camera Link cable increases versatility and resilience in restricted space applications. The unique right angle overmolding available in up, down, left and right orientations allows for immediate turns behind the interface that are specific to your application needs eliminating the need for minimum bend radius concerns. The common configuration consists of a right angle on the camera end and an overmolded straight connector on the equipment end. However both connectors are available with a right angle.

Our High Flex extension cables offer system versatility and convenience when required to extend your current cable length. Both the plug and the receptacle connectors feature durable overmolded strain reliefs. The receptacle end is completed with 4/40 jacknuts to ensure locking and proper, constant connection through motion and vibration. Right angle and low profile right angle assemblies are also available in the extension format.

The latch style locking offers a quicker connect/disconnect time for the plug end than standard thumbscrews. Cables are available with latches on both ends and with latches on one end and thumbscrews on the other.

Intercon 1 high-flex cable construction adheres with the Camera Link specifications and performs past 5 million flex cycles.

Configurations are available with:

MDR to MDR, MDR to SDR, and SDR to SDR with straight overmolded ends or with a combination of right angle Up, Down, Left, or Right as well as low profile Up or Down. See page 54 for overmold dimensions.

### Main Product Specifications

#### Features

- Durable overmolding
- Thumbscrew locking
- Designed to surpass 5 million flex cycles
- Camera Link Certified
- Robust High Flex cable
- 360 Degree shielding
- Right angle interfaces
- Quick latch style locking
- RoHS Compliant

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

## High Flex Camera Link cable options

### Standard Camera Link cable

| Cable Specifications |              |
|----------------------|--------------|
| Overall Diameter     | .375 Inches  |
| Max Temperature      | 80 Degrees C |
| Jacket Color         | Black        |
| UL/CSA Rated         | Yes          |
| Min. Bend Radius     | 3.75 Inches  |
| Flame Rating         | VW-1         |

| Primary Components |                                        |
|--------------------|----------------------------------------|
| Cable              | 11 Individually Shielded Twisted Pairs |
| Connector A        | 26 Pos MDR or SDR (HDR)                |
| Connector B        | 26 Pos MDR or SDR (HDR)                |

Standard Camera Link Thin cable up to 5 meters. Consult customer service for longer lengths

| Cable Specifications |              |
|----------------------|--------------|
| Overall Diameter     | .270 Inches  |
| Max Temperature      | 80 Degrees C |
| Jacket Color         | Black        |
| UL/CSA Rated         | Yes          |
| Min. Bend Radius     | 2.70 Inches  |
| Flame Rating         | VW-1         |

| Primary Components |                                        |
|--------------------|----------------------------------------|
| Cable              | 11 Individually Shielded Twisted Pairs |
| Connector A        | 26 Pos MDR or SDR (HDR)                |
| Connector B        | 26 Pos MDR or SDR (HDR)                |

### Power Over Camera Link cable

| Cable Specifications |              |
|----------------------|--------------|
| Overall Diameter     | .380 Inches  |
| Max Temperature      | 80 Degrees C |
| Jacket Color         | Black        |
| UL/CSA Rated         | Yes          |
| Min. Bend Radius     | 3.80 Inches  |
| Flame Rating         | VW-1 / FT-1  |

| Primary Components |                                                          |
|--------------------|----------------------------------------------------------|
| Cable              | 11 Individually Shielded Twisted Pairs with 2 conductors |
| Connector A        | 26 Pos MDR or SDR (HDR)                                  |
| Connector B        | 26 Pos MDR or SDR (HDR)                                  |

Power Over Camera Link Thin cable up to 5 meters. Consult customer service for longer lengths

| Cable Specifications |              |
|----------------------|--------------|
| Overall Diameter     | .285 Inches  |
| Max Temperature      | 80 Degrees C |
| Jacket Color         | Black        |
| UL/CSA Rated         | Yes          |
| Min. Bend Radius     | 2.85 Inches  |
| Flame Rating         | VW-1         |

| Primary Components |                                                          |
|--------------------|----------------------------------------------------------|
| Cable              | 11 Individually Shielded Twisted Pairs with 2 conductors |
| Connector A        | 26 Pos MDR or SDR (HDR)                                  |
| Connector B        | 26 Pos MDR or SDR (HDR)                                  |

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**  
**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
 P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

## Ordering information for Standard Camera Link

CLCP-xx-P – Straight MDR overmold to Straight MDR overmold  
 CLCP\*-xx-PL\* – Right Angle MDR overmold to Right Angle Low Profile MDR available in up or down  
 CLCP\*-xx-P – Right Angle MDR overmold to Straight MDR overmold  
 CLCP\*-xx-P\* – Right Angle MDR overmold to Right Angle MDR overmold  
 CLCP\*-xx-PL\* – Right Angle MDR overmold to Right Angle Low Profile MDR overmold only  
 CLCP3-xx-P – MDR latch back shell to Straight MDR overmold



Straight MDR



Right/Left MDR



Up/Down MDR



Low Profile MDR  
(Up and Down only)



Back Shell MDR

## Ordering information for Mini Camera Link

MCLCP-xx-P – Straight SDR overmold to Straight MDR overmold  
 MCLCP\*-xx-P – Right Angle SDR overmold to Straight MDR overmold  
 MCLCP\*-xx-P\* – Right Angle SDR overmold to Right Angle MDR overmold  
 MCLCP\*-xx-PL\* – Right Angle SDR overmold to Right Angle Low Profile MDR available in up or down  
 MCLCP-xx-MP – Straight SDR overmold to Straight SDR overmold  
 MCLCP\*-xx-MP – Right Angle SDR overmold to Straight SDR overmold  
 MCLCP\*-xx-MP\* – Right Angle SDR overmold to Right Angle SDR overmold



Straight SDR



Up/Down SDR



Left/Right SDR

Replace xx with length in meters  
 Replace \* with "U" for Up, "D" for Down, "R" for Right, "L" for Left  
 For cables longer than 10 meters contact customer service  
 Available in .270" diameter cable contact customer service  
 See page 54 for overmold dimensions

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**  
**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
 P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

## Ordering information for Power Over Camera Link

POCLP-xx-P – Straight MDR overmold to Straight MDR overmold  
 POCLP\*-xx-P – Right Angle MDR overmold to Straight MDR overmold  
 POCLP\*-xx-P\* – Right Angle MDR overmold to Right Angle MDR overmold  
 POCLP\*-xx-PL\* – Right Angle MDR overmold to Right Angle Low Profile MDR available in up or down  
 POCLP3-xx-P – MDR latch back shell to Straight MDR overmold




Straight MDR



Right/Left MDR



Up/Down MDR

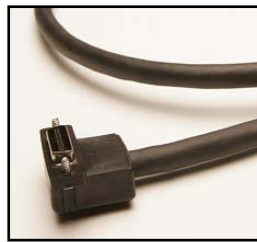

Low Profile MDR  
(Up and Down only)



Back Shell MDR

## Ordering information for Power Over Mini Camera Link

POMCLP-xx-P – Straight SDR overmold to Straight MDR overmold  
 POMCLP\*-xx-P – Right Angle SDR overmold to Straight MDR overmold  
 POMCLP\*-xx-P\* – Right Angle SDR overmold to Right Angle MDR overmold  
 POMLCP\*-xx-PL\* – Right Angle MDR overmold to Right Angle Low Profile MDR available in up or down  
 POMCLP-xx-MP – Straight SDR overmold to Straight SDR overmold  
 POMCLP\*-xx-MP – Right Angle SDR overmold to Straight SDR overmold  
 POMCLP\*-xx-MP\* – Right Angle SDR overmold to Right Angle SDR overmold



Straight SDR



Up/Down SDR



Left/Right SDR

Replace xx with length in meters  
 Replace \* with "U" for Up, "D" for Down, "R" for Right, "L" for Left  
 For cables longer than 10 meters contact customer service  
 Available in .270" diameter cable contact customer service  
 See page 54 for overmold dimensions

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**  
**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
 P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)



## Ordering information for Standard Camera Link extension cables

CLCP-xx-R – Straight MDR overmold to MDR Receptacle overmold

CLCP\*-xx-R – Right Angle MDR overmold to Straight MDR Receptacle overmold

CLCPL\*\*-xx-R – Low Profile Right Angle Right Angle MDR overmold to Right Angle MDR Receptacle overmold

CLCP3-xx-R – Right Angle MDR latch back shell to Straight MDR Receptacle overmold




Straight MDR



Right/Left MDR



Up/Down MDR

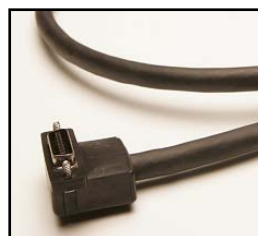

Low Profile MDR  
(Up and Down only)



Back Shell MDR

## Ordering information for Mini Camera Link to Standard Camera Link extension cables

MCLCP-xx-R – Straight SDR overmold to Straight MDR Receptacle overmold

MCLCP\*-xx-R – Right Angle SDR overmold to Straight MDR Receptacle overmold



Straight SDR



Up/Down SDR



Left/Right SDR

Replace xx with length in meters

Replace \* with "U" for Up, "D" for Down, "R" for Right, "L" for Left

For cables longer than 10 meters contact customer service

Available in .270" diameter cable contact customer service

See page 54 for overmold dimensions

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425

P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# Camera Link

## Ordering information for Power Over Camera Link Lite

POCLLP-xx-LP – Straight 14 pos SDR overmold to Straight 14 pos SDR overmold  
POCLLP\*-xx-LP – Right Angle 14 pos SDR overmold to Straight 14 pos SDR overmold  
POCLLP\*-xx-LP\* – Right Angle 14 pos SDR overmold to Right angle 14 pos SDR overmold  
POCLLP-xx-MP – Straight 14 pos SDR overmold to Straight 26pos SDR overmold  
POCLLP\*-xx-MP – Right Angle 14 pos SDR overmold to 26pos Straight SDR overmold  
POCLLP\*-xx-MP\* – Right Angle 14 pos SDR overmold to Right Angle 26pos SDR overmold  
POCLLP-xx-MP\* – Straight 14 pos SDR overmold to Right Angle 26pos SDR overmold  
POCLLP-xx-P – Straight 14 pos SDR overmold to Straight 26pos MDR overmold  
POCLLP\*-xx-P – Right Angle 14 pos SDR overmold to Straight 26pos MDR overmold  
POCLLP\*-xx-P\* – Right Angle 14 pos SDR overmold to Right Angle 26pos MDR overmold  
POCLLP-xx-P\* – Straight 14 pos SDR overmold to Right Angle 26pos MDR overmold

\*\* Prefix is for camera end -- suffix is for equipment end. Contact customer service with questions.



Straight MDR



Right/Left MDR



Up/Down MDR



Low Profile MDR  
(Up and Down only)



Back Shell MDR

## Ordering information for Power Over Mini Camera Link Lite extension cable

POCLLP-xx-R – Straight 14 pos SDR overmold to Straight 26pos MDR overmold  
POCLLP\*-xx-R – Right Angle 14 pos SDR overmold to Straight 26pos MDR overmold



Straight SDR



Up/Down SDR



Left/Right SDR

Replace xx with length in meters  
Replace \* with "U" for Up, "D" for Down, "R" for Right, "L" for Left  
For cables longer than 5 meters contact customer service

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsyst.com](mailto:intercon@nortechsyst.com)

# Camera Link

## High Flex Camera Link – POCLLP-xx-LP

### Product Outline

Power Over Camera Link Lite (PoCL Lite) cable assemblies offer users the ability to reduce the size of their machine vision installation. A 25% reduction in connector size is realized as a result of utilizing the PoCL Lite 14 position connector versus the traditional 26 position HDR/SDR connector. These assemblies are capable of transmitting exceptional Camera Link signals, eliminating the need for a separate camera power supply further reducing the amount of space needed.

Right angle orientations are available. See page 22 for more details and ordering options.



### Main Product Specifications

#### Features

- Rugged Overmolded connectors
- Durable High Flex Cable
- Thumbscrew Locking
- 360 Degree shielding
- RoHS Compliant

#### Cable Specifications

|                  |                |
|------------------|----------------|
| Overall Diameter | .285 Inches    |
| Max Temperature  | 80 Degrees C   |
| Jacket Color     | Black          |
| UL/CSA Rated     | 20276 AWM I/II |
| Min. Bend Radius | 2.85 Inches    |
| Flame Rating     | FT-1           |

#### Primary Components

|             |                                       |
|-------------|---------------------------------------|
| Cable       | 5 Individually Shielded Twisted Pairs |
| Connector A | 14 Pos MDR                            |
| Connector B | See Below                             |

### Ordering Information

| Order Number | Description                                  |
|--------------|----------------------------------------------|
| POCLLP-xx-LP | PoCL Lite to PoCL Lite connection            |
| POCLLP-xx-MP | PoCL Lite to Mini Camera Link connection     |
| POCLLP-xx-P  | PoCL Lite to Standard Camera Link connection |

See page 22 for more details and ordering options.  
XX- is replaced by length in Meters.

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# Camera Link

## Economy Camera Link – ECLP-xx-P

### Product Outline

Designed as an alternative for static ( non-flexing ) applications, these low cost cables offer the dependability of Intercon 1 Camera Link at an economical price.

This series features overmolded connectors for high quality strain relief as well as thumbscrew locking.

Standard lengths of these assemblies are in stock and available to ship.



### Main Product Specifications

#### Features

- Low cost alternative to high flex assemblies
- Overmolded strain relief
- 4/40 Thumbscrews
- Assemblies available from stock.



#### Cable Specifications

|                  |              |
|------------------|--------------|
| Overall Diameter | .352 Inches  |
| Max Temperature  | 80 Degrees C |
| Jacket Color     | Black        |
| UL/CSA Rated     | Yes          |
| Min. Bend Radius | 5.28 Inches  |
| Flame Rating     | VW-1         |

#### Primary Components

|             |                                        |
|-------------|----------------------------------------|
| Cable       | 11 Individually Shielded Twisted Pairs |
| Connector A | 26 Pos MDR                             |
| Connector B | 26 Pos MDR                             |

### Ordering Information

| Order Number | Length |       | Description         |
|--------------|--------|-------|---------------------|
|              | Meters | Feet  |                     |
| ECLP-1.0-P   | 1.0    | 3.28  | Economy Camera Link |
| ECLP-2.0-P   | 2.0    | 6.56  | Economy Camera Link |
| ECLP-3.0-P   | 3.0    | 9.84  | Economy Camera Link |
| ECLP-4.0-P   | 4.0    | 14.76 | Economy Camera Link |
| ECLP-5.0-P   | 5.0    | 16.4  | Economy Camera Link |

Additional lengths are available in stock. Please contact customer service for details.

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# Camera Link HS

## Camera Link HS – CX4PT-xx-CX4PT

### Product Outline

Camera Link HS is a new Camera Link interface that is designed to provide superior signal fidelity over long distance using the smallest, most flexible cable.

These assemblies are designed to meet the needs of all machine vision applications. They carry image data, configuration data, and low jitter with real time triggering signals over a simple network topology supporting cameras and framegrabbers.

Our cable meets the most stringent interconnect requirements to provide higher speed and more flexible data channel interconnects. Each cable is individually tested for eye pattern conformance.



### Main Product Specifications

#### Features

- Thumbscrew locking
- Metal backshell for maximized EMI Protection
- Higher bandwidths
- RoHS compliant

| Cable Specifications   |                  |
|------------------------|------------------|
| Differential Impedance | 100 Ohm +/-5 Ohm |
| Max Temperature        | 75 Degrees C     |
| Jacket Color           | Black            |
| UL Rated               | Yes              |

| Primary Components |                                         |
|--------------------|-----------------------------------------|
| Cable              | 8 Individually Shielded<br>Twinax Pairs |
| Connector A        | SSF-8470                                |
| Connector B        | SSF-8470                                |

### Ordering Information

| Order Number    | Description          |
|-----------------|----------------------|
| CX4PT-1.0-CX4PT | Camera Link HS cable |
| CX4PT-2.0-CX4PT | Camera Link HS cable |
| CX4PT-3.0-CX4PT | Camera Link HS cable |
| CX4PT-5.0-CX4PT | Camera Link HS cable |
| CX4PT-7.0-CX4PT | Camera Link HS cable |
| CX4PT-10-CX4PT  | Camera Link HS cable |
| CX4PT-15-CX4PT  | Camera Link HS cable |

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)



## Infini-Flex Camera Link – IF-CLCP-xx-P




### Product Outline

Designed specifically for cable carrier systems these High Flex cable assemblies provide the ultimate in dependability, electrical and mechanical performance through millions of flex cycles.

Featuring unique characteristics such as low particulation and a tight bend radius, this cable is engineered for a variety of environments.


Custom production quantities and minimum order quantities may apply.

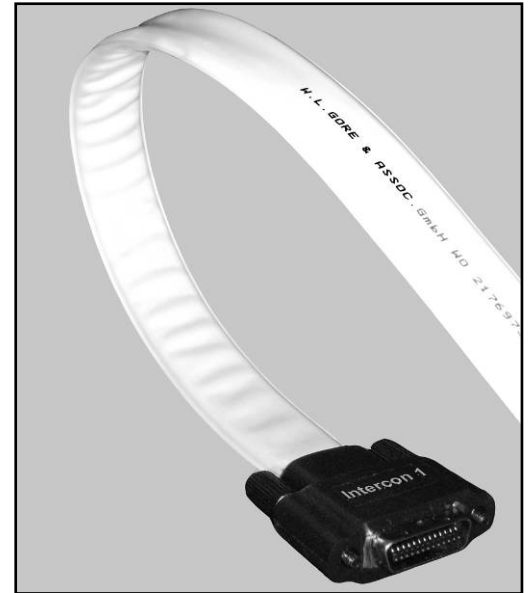

### Main Product Specifications

#### Features

- Overmolded interface with thumbscrew locking
- Low particulation for clean room applications
- High Flex cable designed to surpass 5 million flexes
- RoHS Compliant
- Unique Quad construction

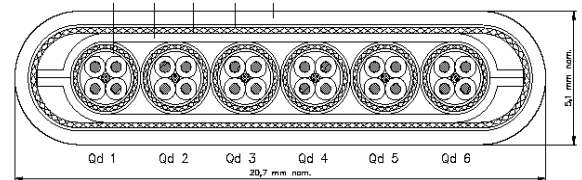

| Cable Specifications |                |
|----------------------|----------------|
| Overall Diameter     | 5.1mm x 20.7mm |
| Jacket Color         | White          |
| UL/CSA Rated         | 21090          |
| Min. Bend Radius     | 50mm           |
| Flame Rating         | Retardant      |

| Primary Components |                   |
|--------------------|-------------------|
| Cable              | Quad Construction |
| Connector A        | 26 Pos MDR Plug   |
| Connector B        | 26 Pos MDR Plug   |

### Ordering Information

| Order Number | Description           |
|--------------|-----------------------|
| IF-CLCP-xx-P | High Flex Camera Link |

Replace xx with length in meters  
For cables longer than 10 meters contact customer service

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**  
**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# Camera Link

## High Flex Camera Link with 38999 Mil-Spec connector

### Product Outline

Designed specifically for rugged conditions with High Flex cable to provide the ultimate in dependability, electrical and mechanical performance.

These assemblies are available with many custom configurations with one or more cameras utilizing any of our 4 different Intercon Camera Link cables.

This along with our array of overmolds for Standard and Mini Camera Link connectors, we can make your configuration specific to your application.



### Main Product Specifications

#### Features

- High Flex cable designed to surpass 5 million flexes
- RoHS Compliant

| Cable Specifications |                            |
|----------------------|----------------------------|
| Overall Diameter     | .375 Inches or .270 Inches |
| Max Temperature      | 80 Degrees C               |
| Jacket Color         | Black                      |
| UL/CSA Rated         | Yes                        |
| Min. Bend Radius     | 3.75 Inches or 2.70 Inches |

| Primary Components |                                        |
|--------------------|----------------------------------------|
| Cable              | 11 Individually Shielded Twisted Pairs |
| Connector A        | 38999                                  |
| Connector B        | 26 Pos MDR or SDR (HDR)                |

### Ordering Information

| Order Number                                    | Description                 |
|-------------------------------------------------|-----------------------------|
| Contact customer service for custom part number | 38999 High Flex Camera Link |

For cables longer than 10 meters contact customer service

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

## OptiLink – Fiber Optic Extension System – CLOL-xxx\*

### Product Outline

OptiLink is a fiber optic extension system that allows Camera Link signals to be passed beyond the standard's maximum lengths.

Lengths of up to 300 meters can be achieved with a standard fiber optic cable. With a special extended system, signals can be successfully transmitted up to 10 kilometers.

This allows for incredible versatility for unique applications.

A variety of fiber optic cables are available including standard, high flex and outdoor rated.



### Main Product Specifications

#### Features

- Extended length for Camera Link signals
- Multiple fiber optic variations
- Standard LC duplex connections
- Attached directly to camera and framegrabber
- Base, Medium, and Full Modes available

#### Primary Components

| Primary Components |                        |
|--------------------|------------------------|
| Cable              | Fiber Optic            |
| Connector A        | LC Duplex              |
| Connector B        | LC Duplex              |
| Power Adapter      | Wall Mount Transformer |

### Ordering Information

| Order Number | Description                                  |
|--------------|----------------------------------------------|
| CLOL-XXXS    | OptiLink System with Standard LC Cable       |
| CLOL-XXXI    | OptiLink System with Rugged Outdoor LC Cable |
| CLOL-XXXH    | OptiLink System with High Flex LC Cable      |

To insure proper configuration please provide camera and frame grabber model numbers at time of quote. Part numbers listed are for base mode. Medium and full mode configurations also available  
Please replace XX with the desired length in Meters

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# Gigabit Ethernet

## Industrial High Flex Gig E Assemblies – F-GEVP-xx-P

### Product Outline

Industrial High Flex Gig E cables are designed to interface Gig E and Gig E Vision cameras directly to a computer, eliminating the need for frame grabbers.

F-GEVP is the solution for brutal applications that require more than the traditional CAT 5e cable can offer. Double shielded cable ensures the best electrical performance. Our unique overmold design provides increased strain relief.

The high flex cable is designed to withstand 12 million + flex cycles. The durable TPE jacket provides additional protection from elements such as water, oil, and abrasion.



### Main Product Specifications

#### Features

- Overmolded strain relief
- High flex cable
- Robust TPE jacket
- Double shielded
- RoHS Compliant

Cat 6A available upon request

#### Cable Specifications

| Overall Diameter | .245 Inches  |
|------------------|--------------|
| Max Temperature  | 80 Degrees C |
| Jacket Color     | Black        |
| UL/CSA Rated     | Yes          |
| Min. Bend Radius | 2.45 Inches  |
| Flame Rating     | CSA FT-1     |

#### Primary Components

| Cable       | 4 Twisted Pairs |
|-------------|-----------------|
| Connector A | Standard RJ45   |
| Connector B | Standard RJ45   |

### Ordering Information

| Order Number | Description              |
|--------------|--------------------------|
| F-GEVP-xx-P  | High Flex Gig E Straight |

Replace xx with length in meters  
Replace xx with length in meters (max. 60 meters)

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# Gigabit Ethernet

## Industrial High Flex Gig E Assemblies Horizontal – F-GEVPT-xx-P

### Product Outline

Industrial High Flex Gig E cables are designed to interface Gig E and Gig E Vision cameras directly to a computer, eliminating the need for frame grabbers.

F-GEVPT is the solution for brutal applications that require more than the traditional CAT 5e cable can offer. Our unique overmold design provides increased strain relief. The thumbscrew locking feature ensures that the interface will remain secure despite motion and vibration. The double shielded design offers superior protection and performance.

The high flex cable is designed to withstand 12 million + flex cycles. The durable TPE jacket provides additional protection from elements such as water, oil, and abrasion.



### Main Product Specifications

#### Features

- Low profile overmolded strain relief
- Thumbscrew locking one end
- High flex cable
- Robust TPE jacket
- RoHS Compliant
- Short strain relief available for thumbscrew end

Cat 6A available upon request

#### Cable Specifications

|                  |              |
|------------------|--------------|
| Overall Diameter | .245 Inches  |
| Max Temperature  | 80 Degrees C |
| Jacket Color     | Black        |
| UL/CSA Rated     | Yes          |
| Min. Bend Radius | 2.45 Inches  |
| Flame Rating     | CSA FT-1     |

#### Primary Components

|             |                 |
|-------------|-----------------|
| Cable       | 4 Twisted Pairs |
| Connector A | Honda RJ45      |
| Connector B | Standard RJ45   |

### Ordering Information

| Order Number | Description                         |
|--------------|-------------------------------------|
| F-GEVPT-xx-P | High Flex Gig E Horizontal Overmold |

Replace xx with length in meters  
Replace xx with length in meters (max. 60 meters)

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)



# Gigabit Ethernet

## Industrial High Flex Gig E Assemblies – Vertical - F-GEVVPT-xx-P

### Product Outline

Industrial High Flex Gig E cables are designed to interface Gig E and Gig E Vision cameras directly to a computer, eliminating the need for frame grabbers.

F-GEVVPT is the solution for brutal applications that require more than the traditional CAT 5e cable can offer. Our unique overmold design provides increased strain relief. The thumbscrew locking feature ensures that the interface will remain secure despite motion and vibration. The double shielded design offers superior protection and performance.

The high flex cable is designed to withstand 12 million + flex cycles. The durable TPE jacket provides additional protection from elements such as water, oil, and abrasion.



### Main Product Specifications

#### Features

- Overmolded strain relief
- Thumbscrew locking one end
- High flex cable
- Robust TPE jacket
- Double shielded
- RoHS compliant

Cat 6A available upon request

#### Cable Specifications

|                  |              |
|------------------|--------------|
| Overall Diameter | .245 Inches  |
| Max Temperature  | 80 Degrees C |
| Jacket Color     | Black        |
| UL/CSA Rated     | Yes          |
| Min. Bend Radius | 2.45 Inches  |
| Flame Rating     | CSA FT-1     |

#### Primary Components

|             |                 |
|-------------|-----------------|
| Cable       | 4 Twisted Pairs |
| Connector A | Standard RJ45   |
| Connector B | Standard RJ45   |

### Ordering Information

| Order Number  | Description                       |
|---------------|-----------------------------------|
| F-GEVVPT-xx-P | High Flex Gig E Vertical Overmold |

Replace xx with length in meters  
Replace xx with length in meters (max. 60 meters)

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# Gigabit Ethernet

## Industrial High Flex Gig E Assemblies - Horizontal - R/A F-GEVPT\*-xx-P

### Product Outline

Industrial High Flex Gig E cables are designed to interface Gig E and Gig E Vision cameras directly to a computer, eliminating the need for frame grabbers.

Our unique right/left and up/down strain relief orientations provide a solution for those applications where limited space exists behind the camera. The low profile right angle orientations eliminate the stress that can be placed on the cable, connector and camera when using a traditional straight assembly in these tight areas. The thumbscrew-locking feature ensures that the interface will remain secure despite motion and vibration.

Intercon's industrial high flex cable has exceeded 12 million + flex cycles in both tick tock and rolling torsion testing. The double-shielded cable design offers superior protection and performance while the durable TPE jacket provides additional protection from elements such as water, oil, and abrasion.



### Main Product Specifications

#### Features

- Overmolded strain relief
- Thumbscrew locking one end
- High flex cable
- Robust TPE jacket
- Double shielded
- RoHS compliant

Cat 6A available upon request

| Cable Specifications |              |
|----------------------|--------------|
| Overall Diameter     | .245 Inches  |
| Max Temperature      | 80 Degrees C |
| Jacket Color         | Black        |
| UL/CSA Rated         | Yes          |
| Min. Bend Radius     | 2.45 Inches  |
| Flame Rating         | CSA FT-1     |

| Primary Components |                 |
|--------------------|-----------------|
| Cable              | 4 Twisted Pairs |
| Connector A        | Standard RJ45   |
| Connector B        | Standard RJ45   |

### Ordering Information

| Order Number  | Description                         |
|---------------|-------------------------------------|
| F-GEVPT*-xx-P | High Flex Gig E Horizontal Overmold |

\* is replaced with "L" for Left, "R" for Right, "U" for Up, "D" for Down  
Replace xx with length in meters (max. 60 meters)

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# Gigabit Ethernet


## Industrial High Flex Gig E Assemblies - Vertical - R/A F-GEVPT\*-xx-P

### Product Outline

Industrial High Flex Gig E cables are designed to interface Gig E and Gig E Vision cameras directly to a computer, eliminating the need for frame grabbers.

Our unique right/left and up/down strain relief orientations provide a solution for those applications where limited space exists behind the camera. The low profile right angle orientations eliminate the stress that can be placed on the cable, connector and camera when using a traditional straight assembly in these tight areas. The thumbscrew-locking feature ensures that the interface will remain secure despite motion and vibration.

Intercon's industrial high flex cable has exceeded 12 million + flex cycles in both tick tock and rolling torsion testing. The double-shielded cable design offers superior protection and performance while the durable TPE jacket provides additional protection from elements such as water, oil, and abrasion.

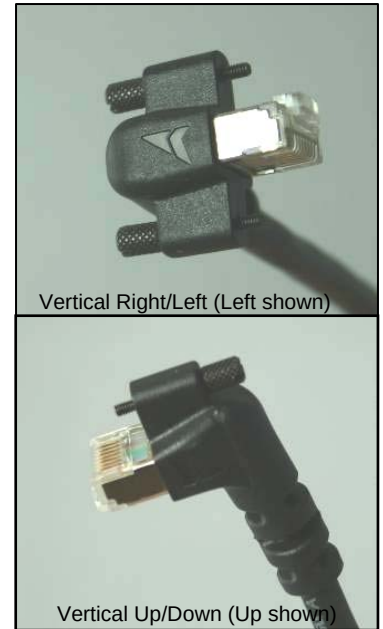

### Main Product Specifications

#### Features

- Overmolded strain relief
- Thumbscrew locking one end
- High flex cable
- Robust TPE jacket
- Double shielded
- RoHS compliant

Cat 6A available upon request

| Cable Specifications |              |
|----------------------|--------------|
| Overall Diameter     | .245 Inches  |
| Max Temperature      | 80 Degrees C |
| Jacket Color         | Black        |
| UL/CSA Rated         | Yes          |
| Min. Bend Radius     | 2.45 Inches  |
| Flame Rating         | CSA FT-1     |

| Primary Components |                 |
|--------------------|-----------------|
| Cable              | 4 Twisted Pairs |
| Connector A        | Standard RJ45   |
| Connector B        | Standard RJ45   |

### Ordering Information

| Order Number  | Description                       |
|---------------|-----------------------------------|
| F-GEVPT*-xx-P | High Flex Gig E Vertical Overmold |

\* is replaced with "L" for Left, "R" for Right, "U" for Up, "D" for Down  
Replace xx with length in meters

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# M12 Industrial Ethernet

## Industrial High Flex M12 Assemblies

### Product Outline

**Industrial High Flex M12 to M12** cables are designed to interface Ethernet and Fieldbus applications as well as manufacturing and factory automation equipment.

**Industrial High Flex M12 to RJ45** cables are designed to interface Gig E Vision cameras with an M12 connector directly to a computer, eliminating the need for frame grabbers.

**Industrial High Flex M12 to flying leads** allows you to connect directly to equipment that may not have a connector or needs to be routed inside your specific application.

Intercon is the solution for applications that require more than the traditional CAT 5e. Double shielded cable ensures the best electrical performance. The durable TPE jacket provides additional protection from elements such as water, oil, and abrasion.

Intercon's industrial high flex cable has exceeded 12 million + flex cycles in both tick tock and rolling torsion testing.



### Main Product Specifications

#### Features

- Overmolded strain relief
- Robust TPE jacket
- RoHS Compliant
- High flex cable
- Double shielded
- Cat 6A available

#### Cable Specifications

|                  |              |
|------------------|--------------|
| Overall Diameter | .245 Inches  |
| Max Temperature  | 80 Degrees C |
| Jacket Color     | Black        |
| UL/CSA Rated     | Yes          |
| Min. Bend Radius | 2.45 Inches  |
| Flame Rating     | CSA FT-1     |

#### Primary Components

|             |                 |
|-------------|-----------------|
| Cable       | 4 Twisted Pairs |
| Connector A | 8 Pos M12       |
| Connector B | SEE BELOW       |

### Ordering Information

| Order Number   | Description                      |
|----------------|----------------------------------|
| M128P-xx-M128P | High Flex M12 8 Pos to M12 8 Pos |
| M12-RJ45-xx    | High Flex M12 8 Pos to RJ45      |
| M12P-OE-xx     | High Flex M12 to Flying Leads    |

Replace xx with length in meters

Replace xx with length in meters (max. 60 meters)

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# IEEE 1394a

## Economy IEEE 1394a Type A to Type A – MIDAP-xx-PA

### Product Outline

These standard IEEE 1394 interface assemblies, also referred to as FireWire or i.Link, use precision computer quality cable and rugged molded connector hoods to ensure durability and high quality video image transmission. Precision assembly and resilient industrial-grade PVC compounds in the overmolding material provide dependable operation.

This compact and inexpensive cable provides a high speed industry standard serial bus with data transfer rates of 100, 200, or 400 Mbps.

See IF-MIDAP-xx-PA for high flex version



### Main Product Specifications

#### Features

- Low cost IEEE 1394a
- Industrial design
- Supports Plug and Play
- High data transfer rates
- Supports multiple devices

| Cable Specifications |                     |
|----------------------|---------------------|
| Overall Diameter     | .220 Inches         |
| Max Temperature      | 60 Degrees C        |
| Jacket Color         | Black               |
| UL/CSA Rated         | Yes                 |
| Data Transfer Rate   | 100 / 200 / 400 Mps |
| Min. Bend Radius     | 3.30 Inches         |

| Primary Components |                  |
|--------------------|------------------|
| Cable              | IEEE 1394a Cable |
| Connector A        | 6 Pos Type A     |
| Connector B        | 6 Pos Type A     |

### Ordering Information

| Order Number  | Length |      | Description      |
|---------------|--------|------|------------------|
|               | Meters | Feet |                  |
| MIDAP-1.9-PA  | 1.9    | 6.0  | Type A to Type A |
| MIDAP-3.05-PA | 3.05   | 10.0 | Type A to Type A |
| MIDAP-4.6-PA  | 4.6    | 15.0 | Type A to Type A |

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)



# IEEE 1394a

## Economy IEEE 1394a Type A to Type B – MIDAP-xx-PB

### Product Outline

These standard IEEE 1394 interface assemblies, also referred to as FireWire or i.Link, use precision computer quality cable and rugged molded connector hoods to ensure durability and high quality video image transmission. Precision assembly and resilient industrial-grade PVC compounds in the overmolding material provide dependable operation.

This compact and inexpensive cable provides a high speed industry standard serial bus with data transfer rates of 100, 200 or 400 Mbps.

See IF-MIDAP-xx-PB for High Flex version



### Main Product Specifications

#### Features

- Low cost IEEE 1394a
- Industrial design
- Supports Plug and Play
- High data transfer rates
- Supports multiple devices

#### Cable Specifications

|                    |                     |
|--------------------|---------------------|
| Overall Diameter   | .220 Inches         |
| Max Temperature    | 60 Degrees C        |
| Jacket Color       | Black               |
| UL/CSA Rated       | Yes                 |
| Data Transfer Rate | 100 / 200 / 400 Mps |
| Min. Bend Radius   | 3.30 Inches         |

#### Primary Components

|             |                  |
|-------------|------------------|
| Cable       | IEEE 1394a Cable |
| Connector A | 6 Pos Type A     |
| Connector B | 6 Pos Type B     |

### Ordering Information

| Order Number  | Length |      | Description      |
|---------------|--------|------|------------------|
|               | Meters | Feet |                  |
| MIDAP-1.9-PB  | 1.9    | 6.0  | Type A to Type B |
| MIDAP-3.05-PB | 3.05   | 10.0 | Type A to Type B |
| MIDAP-4.6-PB  | 4.6    | 15.0 | Type A to Type B |

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# IEEE 1394a

## Economy IEEE 1394a Type B to Type B – MIDBP-xx-PB

### Product Outline

These standard IEEE 1394 interface assemblies, also referred to as FireWire or i.Link, use precision computer quality cable and rugged molded connector hoods to ensure durability and high quality video image transmission. Precision assembly and resilient industrial-grade PVC compounds in the overmolding material provide dependable operation.

This compact and inexpensive cable provides a high speed industry standard serial bus with data transfer rates of 100, 200, or 400 Mbps.

See IF-MIDBP-xx-PB for High Flex version



### Main Product Specifications

#### Features

- Low cost IEEE 1394a
- Industrial design
- Supports Plug and Play
- High data transfer rates
- Supports multiple devices

#### Cable Specifications

|                    |                     |
|--------------------|---------------------|
| Overall Diameter   | .220 Inches         |
| Max Temperature    | 60 Degrees C        |
| Jacket Color       | Black               |
| UL/CSA Rated       | Yes                 |
| Data Transfer Rate | 100 / 200 / 400 Mps |
| Min. Bend Radius   | 3.30 Inches         |

#### Primary Components

|             |                  |
|-------------|------------------|
| Cable       | IEEE 1394a Cable |
| Connector A | 6 Pos Type B     |
| Connector B | 6 Pos Type B     |

### Ordering Information

| Order Number  | Length |      | Description      |
|---------------|--------|------|------------------|
|               | Meters | Feet |                  |
| MIDBP-1.9-PB  | 1.9    | 6.0  | Type B to Type B |
| MIDBP-3.05-PB | 3.05   | 10.0 | Type B to Type B |
| MIDBP-4.6-PB  | 4.6    | 15.0 | Type B to Type B |

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

## InfiniFlex IEEE 1394a Type A – A w/ Latches – IF-MIDAPC-xx-PAC

### Product Outline

These high flex IEEE 1394a type interface assemblies use a proprietary industrial grade Intercon 1 InfiniFlex cable integrated with squeeze latch connector hoods to ensure secure, easy locking through motion and vibration. InfiniFlex products are designed to surpass 10 million flex cycles in demanding industrial applications, ensuring years of uninterrupted performance.

The exceptional cable design transmits data at rates up to 400 Mbps. This high performance FireWire cable has performed at lengths exceeding the IEEE 1394 standards in a variety of applications.



### Main Product Specifications

#### Features

- InfiniFlex – 10 million + flex cable
- Quick latch locking
- Superior Performance at long lengths
- Supports Plug and Play
- Compatible with IEEE 1394a

#### Cable Specifications

|                  |              |
|------------------|--------------|
| Overall Diameter | .320 Inches  |
| Max Temperature  | 80 Degrees C |
| Jacket Color     | Violet       |
| UL/CSA Rated     | Yes          |
| Min. Bend Radius | 3.20 Inches  |
| Flame Rating     | VW-1 / FT-1  |

#### Primary Components

|             |                      |
|-------------|----------------------|
| Cable       | IEEE 1394a type      |
| Connector A | 6 Pos IEEE 1394 Plug |
| Connector B | 6 Pos IEEE 1394 Plug |

### Ordering Information

| Order Number      | Length |       | Description                             |
|-------------------|--------|-------|-----------------------------------------|
|                   | Meters | Feet  |                                         |
| IF-MIDAPC-1.0-PAC | 1.0    | 3.28  | InfiniFlex Firewire Type A-A w/ Latches |
| IF-MIDAPC-2.0-PAC | 2.0    | 6.56  | InfiniFlex Firewire Type A-A w/ Latches |
| IF-MIDAPC-3.0-PAC | 3.0    | 9.84  | InfiniFlex Firewire Type A-A w/ Latches |
| IF-MIDAPC-4.0-PAC | 4.0    | 13.12 | InfiniFlex Firewire Type A-A w/ Latches |
| IF-MIDAPC-5.0-PAC | 5.0    | 16.40 | InfiniFlex Firewire Type A-A w/ Latches |

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

Custom variations available. Please contact customer service for additional information.

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

## InfiniFlex IEEE 1394a Type A – A w/ Thumbscrews – IF-MIDAPT-xx-PAT

### Product Outline

These high flex IEEE 1394a type interface assemblies use a proprietary industrial grade Intercon 1 InfiniFlex cable integrated with overmolded thumbscrew locking to ensure a constant secure connection through motion and vibration. InfiniFlex products are designed to surpass 10 million flex cycles in demanding industrial applications, ensuring years of uninterrupted performance.

The exceptional cable design transmits data at rates up to 400 Mbps. This high performance FireWire cable has performed at lengths exceeding the IEEE 1394 standards in a variety of applications.



### Main Product Specifications

#### Features

- InfiniFlex – 10 million + flex cable
- Thumbscrew locking
- Superior Performance at long lengths
- Supports Plug and Play
- Compatible with IEEE 1394a

#### Cable Specifications

|                  |              |
|------------------|--------------|
| Overall Diameter | .320 Inches  |
| Max Temperature  | 80 Degrees C |
| Jacket Color     | Violet       |
| UL/CSA Rated     | Yes          |
| Min. Bend Radius | 3.20 Inches  |
| Flame Rating     | VW-1 / FT-1  |

#### Primary Components

|             |                      |
|-------------|----------------------|
| Cable       | IEEE 1394a type      |
| Connector A | 6 Pos IEEE 1394 Plug |
| Connector B | 6 Pos IEEE 1394 Plug |

### Ordering Information

| Order Number      | Length |       | Description                                 |
|-------------------|--------|-------|---------------------------------------------|
|                   | Meters | Feet  |                                             |
| IF-MIDAPT-1.0-PAT | 1.0    | 3.28  | InfiniFlex Firewire Type A-A w/ Thumbscrews |
| IF-MIDAPT-2.0-PAT | 2.0    | 6.56  | InfiniFlex Firewire Type A-A w/ Thumbscrews |
| IF-MIDAPT-3.0-PAT | 3.0    | 9.84  | InfiniFlex Firewire Type A-A w/ Thumbscrews |
| IF-MIDAPT-4.0-PAT | 4.0    | 13.12 | InfiniFlex Firewire Type A-A w/ Thumbscrews |
| IF-MIDAPT-5.0-PAT | 5.0    | 16.40 | InfiniFlex Firewire Type A-A w/ Thumbscrews |

Custom variations are available. Please contact customer service for additional information.

### [Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# IEEE 1394a



<http://www.intercon-1.com>

## InfiniFlex IEEE 1394a Type A – Type A – IF-MIDAP-xx-PA

### Product Outline

These high flex IEEE 1394a type interface assemblies use a proprietary industrial grade Intercon 1 InfiniFlex cable integrated with overmolded thumbscrew locking to ensure a constant secure connection through motion and vibration. InfiniFlex products are designed to surpass 10 million flex cycles in demanding industrial applications, ensuring years of uninterrupted performance.

The exceptional cable design transmits data at rates up to 400 Mbps. This high performance FireWire cable has performed at lengths exceeding the IEEE 1394 standards in a variety of applications.



### Main Product Specifications

#### Features

- InfiniFlex – 10 million + flex cable
- Robust overmolded interfaces
- Superior Performance at long lengths
- Supports Plug and Play
- Compatible with IEEE 1394a

#### Cable Specifications

|                  |              |
|------------------|--------------|
| Overall Diameter | .320 Inches  |
| Max Temperature  | 80 Degrees C |
| Jacket Color     | Violet       |
| UL/CSA Rated     | Yes          |
| Min. Bend Radius | 3.20 Inches  |
| Flame Rating     | VW-1 / FT-1  |

#### Primary Components

|             |                      |
|-------------|----------------------|
| Cable       | IEEE 1394a type      |
| Connector A | 6 Pos IEEE 1394 Plug |
| Connector B | 6 Pos IEEE 1394 Plug |

### Ordering Information

| Order Number    | Length |       | Description                  |
|-----------------|--------|-------|------------------------------|
|                 | Meters | Feet  |                              |
| IF-MIDAP-1.0-PA | 1.0    | 3.28  | InfiniFlex Firewire Type A-A |
| IF-MIDAP-2.0-PA | 2.0    | 6.56  | InfiniFlex Firewire Type A-A |
| IF-MIDAP-3.0-PA | 3.0    | 9.84  | InfiniFlex Firewire Type A-A |
| IF-MIDAP-4.0-PA | 4.0    | 13.12 | InfiniFlex Firewire Type A-A |
| IF-MIDAP-5.0-PA | 5.0    | 16.40 | InfiniFlex Firewire Type A-A |

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)



# IEEE 1394b

## High Flex IEEE 1394b - Bilingual – F-FWBPT-xx-PA6

### Product Outline

IEEE 1394b allows for data transfer rates up to 800 Mbps while maintaining signal integrity.

The combination of a high flex cable, durable overmolded strain reliefs, and thumbscrew locking delivers reliable performance in the most demanding applications.

These bilingual cables are designed to interface between 1394a and 1394b equipment.



### Main Product Specifications

#### Features

- High flex cable designed to surpass 11 million cycles
- Thumbscrew locking to ensure secure connection
- Overmolded interfaces for superior strain relief
- RoHS Compliant
- Double shielded to maximize performance

| Cable Specifications |              |
|----------------------|--------------|
| Overall Diameter     | .230 Inches  |
| Max Temperature      | 80 Degrees C |
| Jacket Color         | Green        |
| UL/CSA Rated         | Yes          |
| Min. Bend Radius     | 2.30 Inches  |
| Flame Rating         | FT-1         |

| Primary Components |                                                            |
|--------------------|------------------------------------------------------------|
| Cable              | 2 Shielded Twisted Pairs -<br>2 Discrete Wires             |
| Connector A        | 9 position 1394b bilingual plug                            |
| Connector B        | 6 Position 1394a plug<br>(also available with thumbscrews) |

### Ordering Information

| Order Number    | Length |       | Description               |
|-----------------|--------|-------|---------------------------|
|                 | Meters | Feet  |                           |
| F-FWBPT-1.0-PA6 | 1.0    | 3.28  | IEEE 1394 Bilingual Cable |
| F-FWBPT-2.0-PA6 | 2.0    | 6.56  | IEEE 1394 Bilingual Cable |
| F-FWBPT-3.0-PA6 | 3.0    | 9.84  | IEEE 1394 Bilingual Cable |
| F-FWBPT-4.0-PA6 | 4.0    | 13.12 | IEEE 1394 Bilingual Cable |
| F-FWBPT-5.0-PA6 | 5.0    | 16.40 | IEEE 1394 Bilingual Cable |

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# IEEE 1394b


## High Flex IEEE 1394b - Beta – F-FWBPT-xx-PB

### Product Outline

IEEE 1394b allows for data transfer rates up to 800 Mbps while maintaining signal integrity.

The combination of a high flex cable, durable overmolded strain reliefs, and thumbscrew locking delivers reliable performance in the most demanding applications.

Beta cables interface between 1394b equipment while bilingual cables interface 1394b to 1394a. Both versions are available.

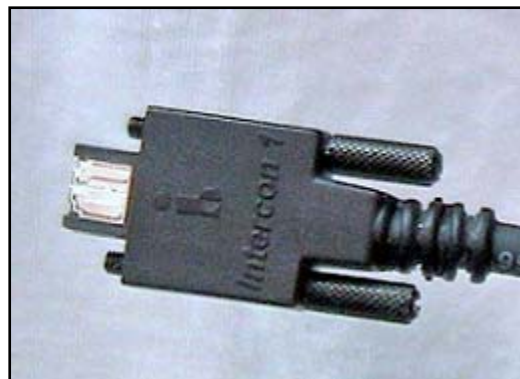

### Main Product Specifications

#### Features

- High flex cable designed to surpass 11 million cycles
- Thumbscrew locking to ensure secure connection in one end
- Overmolded interfaces for superior strain relief
- Supports Plug and Play
- RoHS Compliant
- Double shielded to maximize performance

#### Cable Specifications

|                  |              |
|------------------|--------------|
| Overall Diameter | .230 Inches  |
| Max Temperature  | 80 Degrees C |
| Jacket Color     | Green        |
| UL/CSA Rated     | Yes          |
| Min. Bend Radius | 2.30 Inches  |
| Flame Rating     | FT-1         |

#### Primary Components

|             |                                                |
|-------------|------------------------------------------------|
| Cable       | 2 Shielded Twisted Pairs -<br>2 Discrete Wires |
| Connector A | 9 position 1394b beta plug                     |
| Connector B | 9 position 1394b beta plug                     |

### Ordering Information

| Order Number   | Length |       | Description          |
|----------------|--------|-------|----------------------|
|                | Meters | Feet  |                      |
| F-FWBPT-1.0-PB | 1.0    | 3.28  | IEEE 1394 Beta Cable |
| F-FWBPT-2.0-PB | 2.0    | 6.56  | IEEE 1394 Beta Cable |
| F-FWBPT-3.0-PB | 3.0    | 9.84  | IEEE 1394 Beta Cable |
| F-FWBPT-4.0-PB | 4.0    | 13.12 | IEEE 1394 Beta Cable |
| F-FWBPT-5.0-PB | 5.0    | 16.40 | IEEE 1394 Beta Cable |

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

# IEEE 1394b


## High Flex IEEE 1394b - Beta – F-FWBPT-xx-PBT

### Product Outline

IEEE 1394b allows for data transfer rates up to 800 Mbps while maintaining signal integrity.

The combination of a high flex cable, durable overmolded strain reliefs, and thumbscrew locking delivers reliable performance in the most demanding applications.

Beta cables interface between 1394b equipment while bilingual cables interface 1394b to 1394a. Both versions are available.

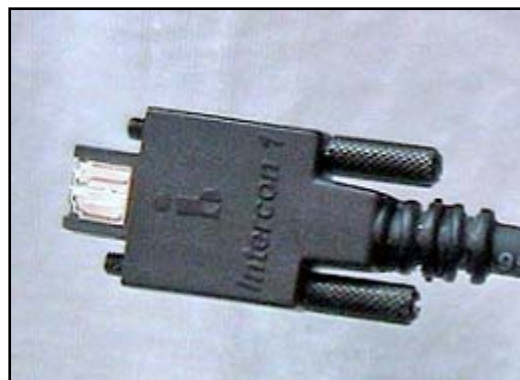

### Main Product Specifications

#### Features

- High flex cable designed to surpass 11 million cycles
- Thumbscrew locking to ensure secure connection on both ends
- Overmolded interfaces for superior strain relief
- Supports Plug and Play
- RoHS Compliant
- Double shielded to maximize performance

| Cable Specifications |              |
|----------------------|--------------|
| Overall Diameter     | .230 Inches  |
| Max Temperature      | 80 Degrees C |
| Jacket Color         | Green        |
| UL/CSA Rated         | Yes          |
| Min. Bend Radius     | 2.30 Inches  |
| Flame Rating         | FT-1         |

| Primary Components |                                             |
|--------------------|---------------------------------------------|
| Cable              | 2 Shielded Twisted Pairs - 2 Discrete Wires |
| Connector A        | 9 position 1394b beta plug                  |
| Connector B        | 9 position 1394b beta plug                  |

### Ordering Information

| Order Number    | Length |       | Description          |
|-----------------|--------|-------|----------------------|
|                 | Meters | Feet  |                      |
| F-FWBPT-1.0-PBT | 1.0    | 3.28  | IEEE 1394 Beta Cable |
| F-FWBPT-2.0-PBT | 2.0    | 6.56  | IEEE 1394 Beta Cable |
| F-FWBPT-3.0-PBT | 3.0    | 9.84  | IEEE 1394 Beta Cable |
| F-FWBPT-4.0-PBT | 4.0    | 13.12 | IEEE 1394 Beta Cable |
| F-FWBPT-5.0-PBT | 5.0    | 16.40 | IEEE 1394 Beta Cable |

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

## InfiniFlex USB 2.0 – IF-B2PA-xx-PA

### Product Outline

Designed to surpass 10 million flex cycles in the most extreme conditions, this unique cable continues to transmit high quality USB 2.0 signals through bending, torsion, and pulling, creating the perfect solution for industrial USB applications.

The rugged overmold offers additional strain relief and increases the assembly's ability to perform with dependability.

The small cable OD allows continued performance and reliability at a tight bend radius.



### Main Product Specifications

#### Features

- 10 million + flex design
- Overmolded interfaces
- Small bend radius
- Dual shielding
- Double shielded to maximize performance

#### Cable Specifications

|                  |              |
|------------------|--------------|
| Overall Diameter | .117 Inches  |
| Max Temperature  | 80 Degrees C |
| Jacket Color     | Violet       |
| UL/CSA Rated     | Yes          |
| Min. Bend Radius | 1.77 Inches  |
| Flame Rating     | VW-1         |

#### Primary Components

|             |                                   |
|-------------|-----------------------------------|
| Cable       | 1 Twisted Pair - 2 Discrete Wires |
| Connector A | USB 2.0 Type A Plug               |
| Connector B | USB 2.0 Type A Plug               |

### Ordering Information

| Order Number   | Length |       | Description                         |
|----------------|--------|-------|-------------------------------------|
|                | Meters | Feet  |                                     |
| IF-B2PA-1.0-PA | 1.0    | 3.28  | Infiniflex USB 2.0 Type A to Type A |
| IF-B2PA-2.0-PA | 2.0    | 6.56  | Infiniflex USB 2.0 Type A to Type A |
| IF-B2PA-3.0-PA | 3.0    | 9.84  | Infiniflex USB 2.0 Type A to Type A |
| IF-B2PA-4.0-PA | 4.0    | 13.12 | Infiniflex USB 2.0 Type A to Type A |
| IF-B2PA-5.0-PA | 5.0    | 16.40 | Infiniflex USB 2.0 Type A to Type A |

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

**Custom variations available. Please contact customer service for additional information.**

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)

## GPIO Control Cables – GPIO-xx-PS

### Product Outline

Designed for use with GeviCam Gig E cameras, this General Purpose Input/ Output cable provides a variety of functions including external trigger, strobe, RS-485, Audio I/O, and temperature sensing.

This industrial assembly features an overmolded strain relief for maximum stress dispersion. The overmold allows for the use of thumbscrews to secure the interface.

A high flex cable ensures that this robust assembly will continue to perform even in rigorous motion applications.



### Main Product Specifications

#### Features

- High flex cable
- Overmolded strain relief
- Thumbscrew locking

#### Pin Configuration

|   |               |    |               |
|---|---------------|----|---------------|
| 1 | 12VDC Gnd     | 8  | 12 VDC+       |
| 2 | Gnd           | 9  | Trigger In    |
| 3 | Strobe Out    | 10 | RS-485        |
| 4 | RS 485 +      | 11 | Opto D1 in -  |
| 5 | Opto D1 in +  | 12 | Opto D2 out - |
| 6 | Opto D2 out + | 13 | Audio out     |
| 7 | Gnd           | 14 | Audio in      |

#### Cable Specifications

|                  |              |
|------------------|--------------|
| Overall Diameter | .250 Inches  |
| Max Temperature  | 80 Degrees C |
| Jacket Color     | Black        |
| Min. Bend Radius | 1.77 Inches  |

#### Primary Components

|             |                              |
|-------------|------------------------------|
| Cable       | 4TW PR, 2 Discrete, 4 Coaxes |
| Connector A | 14 Pos MDR Plug              |
| Connector B | 14 Pos MDR Plug              |

### Ordering Information

| Order Number | Length |       | Description                         |
|--------------|--------|-------|-------------------------------------|
|              | Meters | Feet  |                                     |
| GPIO-1.0-PS  | 1.0    | 3.28  | Infiniflex USB 2.0 Type A to Type A |
| GPIO-2.0-PS  | 2.0    | 6.56  | Infiniflex USB 2.0 Type A to Type A |
| GPIO-3.0-PS  | 3.0    | 9.84  | Infiniflex USB 2.0 Type A to Type A |
| GPIO-4.0-PS  | 4.0    | 13.12 | Infiniflex USB 2.0 Type A to Type A |
| GPIO-5.0-PS  | 5.0    | 16.40 | Infiniflex USB 2.0 Type A to Type A |

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

Custom variations available. Please contact customer service for additional information.

**Intercon 1** A Division of Nortech Systems, Inc. - 7746 Goedderz Road - Baxter, MN USA 56425  
P 218.828.3157 - Toll Free in US 800.237.9576 - FAX 218.828.1096 - [intercon@nortechsys.com](mailto:intercon@nortechsys.com)



# Remote Head Cross List

## Camera Head to Control Unit Assemblies

### Product Outline

Intercon 1 offers a variety of Remote Head cables to interface between camera heads and control units.

Most configurations are available in high flex, Teflon, and right angle versions.

In addition, we offer custom lengths as well as extension cables and couplers.



### Cross List to Camera Model

| Intercon1 Part Number | Camera Mfr   | Camera Model                        | Cable Number                                |
|-----------------------|--------------|-------------------------------------|---------------------------------------------|
| RHC1P-8.0-SJ          | Panasonic    | GP-CD-1                             | CP-CA31                                     |
| RHC2P-**-SJ           | Panasonic    | GP-MF200                            | WV-CS**                                     |
| RHC3S-**-P            | Elmo/Toshiba | IK-C40, IK-M40, IK-M41              | EXC-4**M                                    |
| RHC3S-**-P            | Elmo/Toshiba | CN-401E, MP-481PAL, ME-411E, ME-421 | EMC-**-A                                    |
| RHC4P-**-P            | Elmo/Toshiba | IK-M30, IK-C30, EC-202, EM102       | EXC-3**M                                    |
| RHC5P-**-P            | Elmo/Toshiba | IK-M30, IK-C30, EC-202II, EM102II   | EXC-3**M Screw lock                         |
| RHC6S-**-P            | Panasonic    | GP-KS102                            | GP-CA44, GP-CA45, GP-CA46, GP-CA48, GP-CA49 |
| RHC7P-**-DS           | Cohu         | 4980                                | 8358-**-                                    |
| RHC8S-**-P            | Panasonic    | GP-KS162                            | GPCA-162/*                                  |
| RHC9P-**-P            | Dage         | IK-TU40A                            | EXC-T4**                                    |
| RHC10S-**-P           | JAI/Pulnix   | M10000K                             | CV-M1200K, CV-M1250K                        |
| RHC11S-**-P           | Elmo/Toshiba | IK-M43, IK-CU34A, MN-42H, CN-42H    | EXC-43**                                    |
| RHC12S-**-P           | Hitachi      | KP-C230                             | EMC-**H                                     |
| RHC13S-**-P           | Elmo         | IK-UM42A, UN411E                    | C**2KAC                                     |
| RHC14S-**-P           | Panasonic    | GP-KS1000                           | GP-CAK/*                                    |
| RHC15S-**-P           | Hitachi      | HV-D27, HV-D37                      | C**KAJ/T                                    |
| RHC17S-**-P           | Sony         | XC-55BB, XC-333                     | CCXC-T20P02, CCXC-T20P05, CCXC-T20P10       |
| RHC18S-**-P           | Teli         | CS5131-01                           | CPC5131M-**J                                |
| RHC19S-**-P           | Panasonic    | GPKS-532                            | GP-CA522/4                                  |
| RHC20XSJ-**-P         | Elmo         | IK-7XD                              | Extension                                   |
| RHC22S-**-P           | Panasonic    | GP-US502                            | GP-CA63                                     |
| RHC23P-**-P           | Elmo         | IK-TU51                             | T503, T506, T510                            |
| RHC24S-**-P           | Sony         | DXC-C33, DXC-C33P                   | CCMC-                                       |

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

# Power Supplies

## North American Wall Mount Transformer – WIPS

### Product Outline

These low cost Intercon 1 AC adapters have proven reliability over years of continued performance.

The lightweight design increases usability on the line and in the field.

The 22AWG cord features a flat Siamese design that separates easily with minimal residue for clean power lead applications



### Main Product Specifications

#### Features

- 22AWG output chord
- Low cost
- RoHS Compliant versions available
- 15ft output cord for longer length assemblies without splicing

| Power Supply Specifications |          |
|-----------------------------|----------|
| Watts                       | 15.5 W   |
| Voltage In                  | 120 VAC  |
| Voltage Out                 | 12 VDC   |
| Amperage Out                | 800 mA   |
| Regulated                   | No       |
| Ratings                     | Class II |

### Ordering Information

WIPS  
(Transformer Unit)      Series\*      ----      Length in feet\*\*

\* See Page 52

\*\* 6ft, 10ft, 15ft standard

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

# Power Supplies

## International Wall Mount Transformer – PSI

### Product Outline

The PSI transformer is designed for North American and international use. The unique switchable blades allow this power transformer to perform globally without the need for additional cord sets.

This regulated light weight, compact model offers additional benefits for ease of use and space restricted applications.

Overload and short circuit protection provide excellent safeguards for your equipment.



### Main Product Specifications

#### Features

- Convenient switchable blade unit
- Switching input
- Regulated
- 20 AWG output cord
- RoHS Compliant

#### Power Supply Specifications

|              |             |
|--------------|-------------|
| Watts        | 15 W        |
| Voltage In   | 100-240 VAC |
| Voltage Out  | 12 VDC      |
| Amperage Out | 1.25 A      |
| Regulated    | Yes         |
| Ratings      | CE Class II |

### Ordering Information

PSI      ----      Length in feet\*\*  
(Transformer Unit)      Series\*

\* See Page 52

\*\* 6ft, 10ft, 15ft standard

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

# Power Supplies

## Desktop Style for North American Use - DPS

### Product Outline

This light weight desktop offers high performance in a compact size.

The large output capabilities enable this unit to be used in a variety of applications including powering multiple cameras.

The LED indicator offers a quick reference for ease of use.

IEC 320 cordsets are included.



### Main Product Specifications

#### Features

- Small compact enclosure
- Regulated
- Short Circuit/ Overload Protection
- Switching input
- RoHS Compliant

| Power Supply Specifications |                        |
|-----------------------------|------------------------|
| Watts                       | 30 W                   |
| Voltage In                  | 100-240 VAC            |
| Voltage Out                 | 9-12 VDC               |
| Amperage Out                | 3 A                    |
| Regulated                   | Yes                    |
| Ratings                     | UL, CUL, TUV, CE, BSMI |

### Ordering Information

DPS  
(Transformer Unit)      Series\*      ----      Length in feet\*\*

\* See Page 52

\*\* 6ft, 10ft, 15ft standard

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

# Power Supplies

## Desktop Style for International Use – IPS

### Product Outline

This light weight desktop offers high performance in a compact size.

The large output capabilities enable this unit to be used in a variety of applications including powering multiple cameras.

The LED indicator offers a quick reference for ease of use.

This unit ships with the international cordset or your choice.



### Main Product Specifications

#### Features

- Small compact enclosure
- Regulated
- Short Circuit/ Overload Protection
- Switching input
- RoHS Compliant

#### Power Supply Specifications

| Power Supply Specifications |                        |
|-----------------------------|------------------------|
| Watts                       | 30 W                   |
| Voltage In                  | 100-240 VAC            |
| Voltage Out                 | 9-12 VDC               |
| Amperage Out                | 3 A                    |
| Regulated                   | Yes                    |
| Ratings                     | UL, CUL, TUV, CE, BSMI |

### Ordering Information

IPS  
(Transformer Unit)      Series\*      ----      Length in feet\*\*

\* See Page 52

\*\* 6ft, 10ft, 15ft standard

Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)

# Power Supplies

<http://www.intercon-1.com>

## Termination Options

| Series | Description                                                              |
|--------|--------------------------------------------------------------------------|
| 100    | 4 Position Circular Connector                                            |
| 200    | 3 Position Mini Din Plug                                                 |
| 300    | 4 Position Circular Connector for Toshiba Cameras                        |
| 400    | 6 Position Circular Connector for Hitachi and Elmo Cameras               |
| 500    | 3 Position Tajimi Connector for Hitachi Cameras                          |
| 600    | 6 Position Circular Connector for Costar and JAI Cameras                 |
| 601    | 6 Position Circular Connector for Dalsa Cameras (To determine            |
| 650    | proper series, provide customer service with Dalsa Camera model number.) |
| 700    | 8 Position Mini Din Plug                                                 |
| 800    | 3 Position Circular Connector for Hitachi Cameras                        |
| 900    | 9 Position D-Subminiature for Dalsa Cameras                              |
| 950    | 4 Position Neutrix Connector                                             |
| 1000   | 3 Position Switchcraft                                                   |
| 3200   | 9 Position D-Subminiature for Costar Cameras                             |
| SL     | Spade Lugs                                                               |
| SP     | 12 Position Circular Connector for Monochrome Cameras                    |
| XC     | 12 Position Circular Connector for Color Cameras                         |



## Video Breakout Options

Most assemblies are also available with BNC or S-Video breakouts.  
 Please contact customer service for additional details.

## Ordering Information

Transformer Unit      Series\*      Length in feet\*\*

\* See Page 52

\*\* 6ft, 10ft, 15ft standard



Custom variations are available. Please contact customer service for additional information.

[Return to Top](#)



# Custom Assemblies

<http://www.intercon-1.com>

## Custom Capabilities

Intercon 1 offers custom cable capabilities for a wide variety of industries and applications. We have the resources to bring your new project through from design assistance to production. Our in house R&D allows us to identify the best solution for unique requirements.


Intercon 1 understands that time is of the essence for new projects. When using standard stock components, we are often able to provide custom first articles for your approval within 3-5 days.

In addition to custom assemblies, we offer custom bulk cables including jacket variations, shielding variations, and custom conductor counts and styles. Cables are also available for flexing and torsion applications.

We also offer the benefits of custom mold tooling including Solid Works design capabilities.

Our in house machine shop provides the ability for us to quickly modify connectors or backshells when necessary.

- Custom bulk cable
- Custom mold tools
- Design assistance
- Low Smoke/ Halogen Free
- Water tight
- Medical grade
- Military style
- Custom power supplies

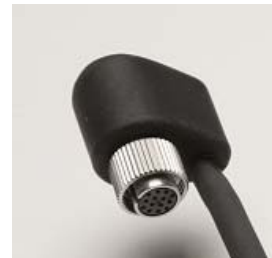

## Major Tooling

|       |          |        |
|-------|----------|--------|
| Molex | Hirose   | Acon   |
| Amp   | Military | Honda  |
| 3M    | Amphenol | Solder |

## Major Test Equipment


High Point  
 Continuity  
 Resistance  
 Digital Sampling Oscilloscope with TDR modules  
 High Frequency Signal Generator



[Return to Top](#)


# Reference Section

# Camera Link overmold information

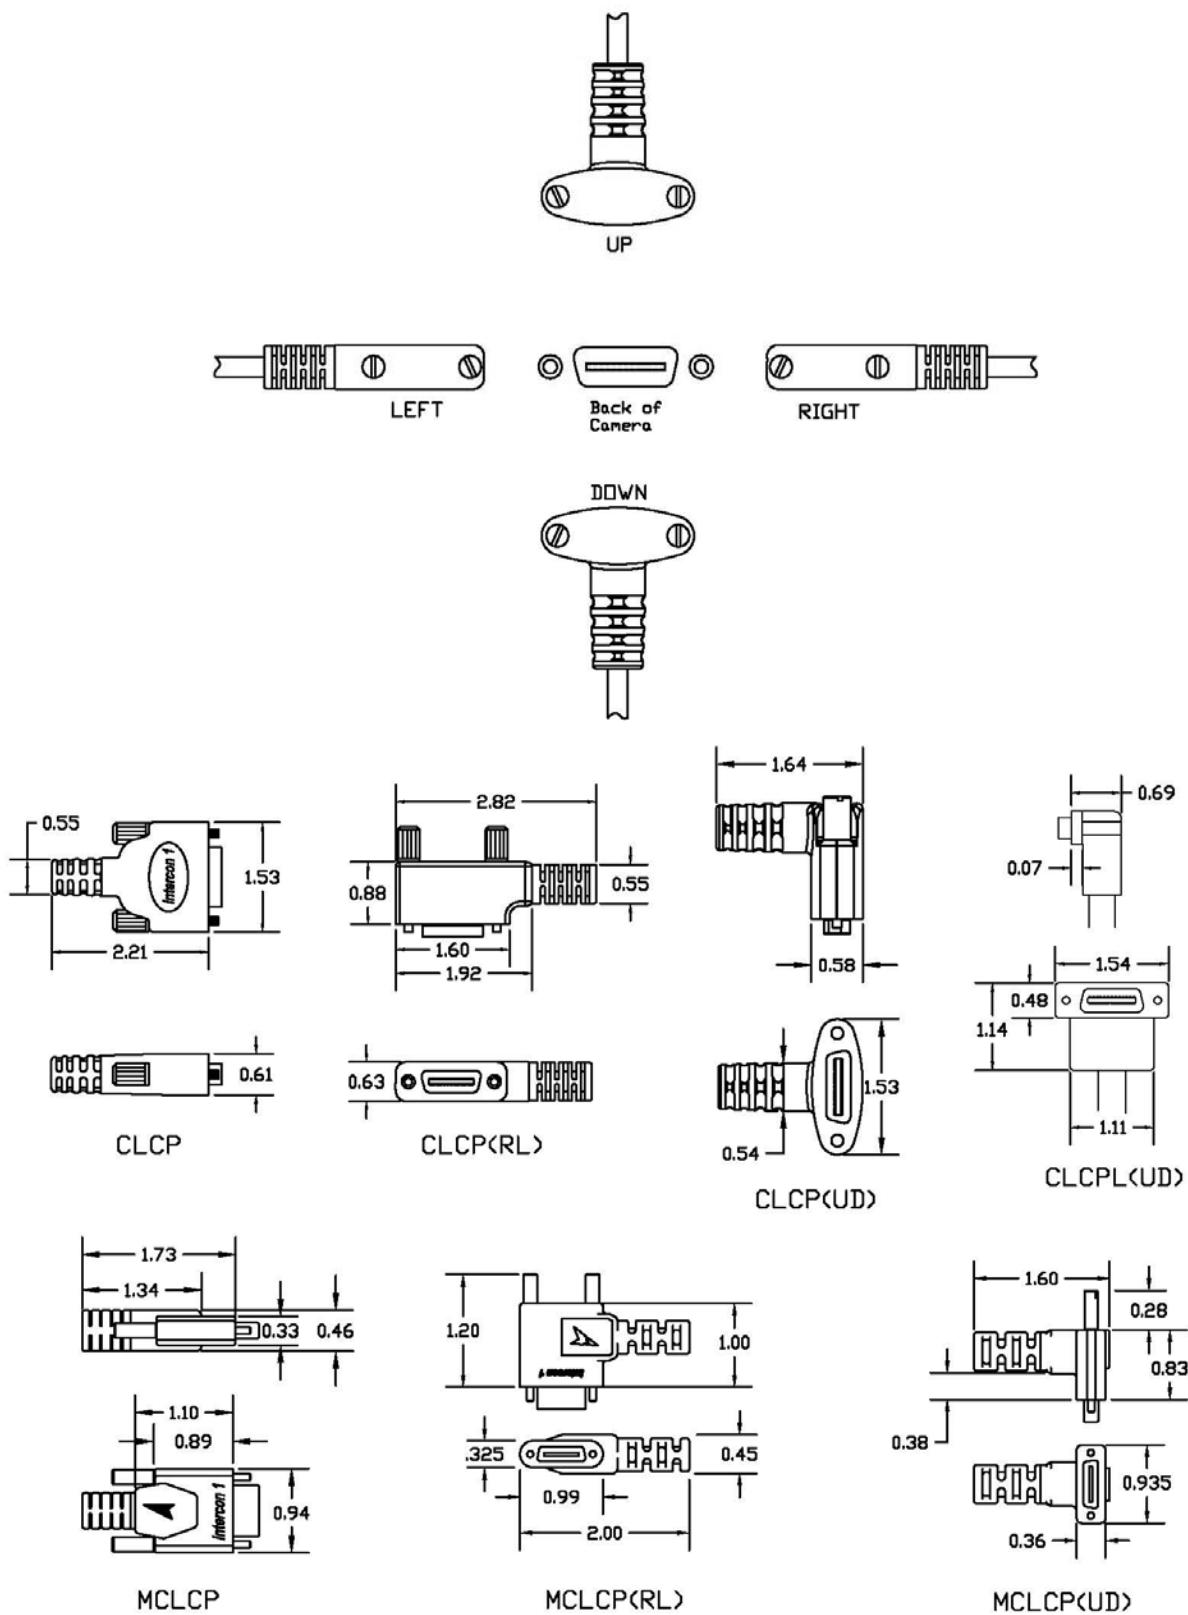

[Return to Top](#)

# Circular connector orientation

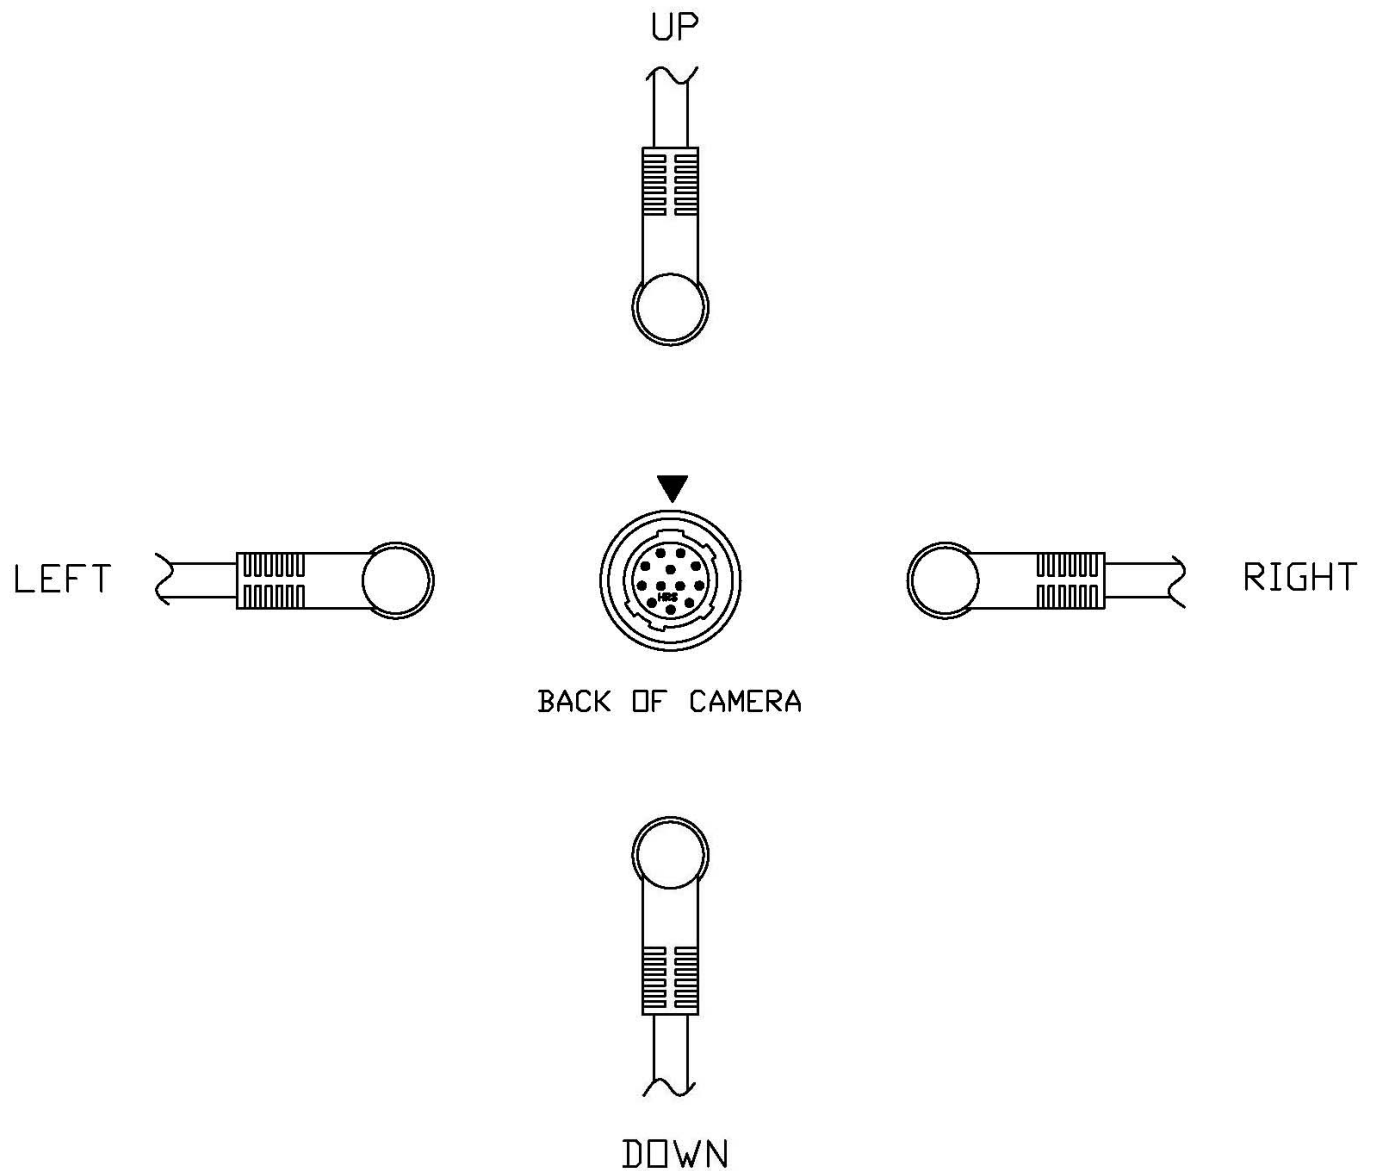

[Return to Top](#)

## Conductors

There are many components in a cable that are important to consider when specifying a cable. Besides the outer jacket, there are: conductors, insulations, fillers, binders, identification, and shields. While some cables are designed for specific applications, others may give acceptable performance for general use. To determine durability and flex-life of a cable, it is important to understand cable construction. If you are unsure please consult our customer service professionals. This way, you may avoid repetitive and unnecessary cable replacements. Here are some basic features to keep in mind.

## Conductors

Conductors come in various gages and construction. Although there are many materials used in conductors, copper and aluminum are the two most common. Copper has better conductivity, but in larger gages it becomes less cost effective to use. Stranded construction is most commonly used because of its better flexibility.

## Insulations

Insulations come in many different materials. Many will work in most applications while others are specific to the environment it will be used in. Be sure to reference the typical insulation characteristics in this catalog.

## Fillers

Fillers are generally used for adding strength, creating and maintaining a sequence within the cable, and filling gaps for a more uniform round appearance.

### Types of fillers

- **Cotton or Rayon** is most commonly used because of the relatively low cost.
- **Paper** is mainly used in power cables because of the ability to get it in flame and moisture resistant properties.
- **Polypropylene** is fairly common with its ability to mold to the shape of gap to be filled.
- **Solid Plastic** is sometimes used because it can be extruded in any shape or diameter.
- **Kevlar** is usually used when strength is important. It has an excellent longitudinal strength but can be expensive to use. This is normally used in fiber optic applications.

## Binders

Binders are generally used to bundle specific conductors or isolate certain conductors and shields. The most common used material is nylon and textile.

### Types of binders

- **Nylon/textile** is usually used when flexibility of a cable is required. These can be braided or wrapped.
- **Tapes** are generally a type of plastic like polyester or polypropylene.

## Identification

Identification can be used to identify: manufacturer, cable type, UL/CSA certification, temp, volt, or fire rating, as well as others. Most companies refer to this information as the 'legend'. The five most used methods in identification are explained below.

### Types of identification

- **ID Threads** – Each manufacturing company has identification threads which can be placed inside the cable should the need arise to identify the manufacturer.
- **Surface Ink** - This is when the information is inked on the surface of the jacket.
- **Sequential Printing** – This method prints an ascending numerical number usually every foot.
- **Indent Printing** – An impression of the information is put on the cable jacket.
- **Embossed Legend** – This is when the manufacturer will have raised lettering on the jacket. This is not common as this procedure is a more expensive operation.

[Return to Top](#)


## Shielding

Shielding provides an efficient way to manage electromagnetic interference. When a shielded cable is present in an ambient electromagnetic field, interference current is induced in the shield. The incident energy is partially reflected from the shield and partially absorbed by the shield, and a small amount penetrates through the shield into the cable. The small amount of energy that makes it all the way through the shield generates an interference voltage in the signal carrying conductors of the cable. The smaller the interference voltage, the better the shield is working. In addition to shielding effectiveness, electronic cable shields must satisfy a long list of electrical, mechanical, chemical, and cost requirements. As a result, a diversified line of shield designs has evolved in the wire and cable industry.

There are three general types of common shielding.


### Braided

Braided is the most common method of shielding. It is comprised of interweaving layers of individual metal strands over cable or insulated conductors. Its consistent coverage remains so as the cable is flexed. The braiding material is normally a metal such as copper or aluminum but can also be other types of material plated with a conductive material. Typical wire size used is 32 to 40 AWG. Braid coverage can range from 70% to 95%. Generally more coverage equals better shielding. This type of shielding is ideal for minimizing low frequency interference and has a lower DC resistance than that of foil shielding. General uses for this type of shielding are low speed communication, good mechanical strength, or when increased flex life is needed. Drawbacks of the braided shield include high manufacturing costs due to the relatively slow speed at which the shield-braiding machinery forms the braid. Braided shields are usually bulkier, heavier and in some cases it may be harder to terminate because the braid has to be either combed out and pig tailed or combed out equally around the OD of the cable.




### Foil

Foil can be constructed in single layer aluminum, conductive nylon, or two layers of aluminum with polyester backing. These types of shields are generally used for individually shielding multi-pair data cables. Foil shielding is the only commonly available shield that can give you 100% coverage. Although it is cheap, it severely limits flexibility and indeed breaks down under repeated flexing. Drain wires are normally used with this type of shield to make termination easier. Although this cable is generally more flexible than braided, it has a much shorter flex life because of its thin mechanical strength and the possibility of separation. Twisting of the conductor pairs with foil shielding can reduce cross talk, which provides the best electrical isolation between adjacent pairs.

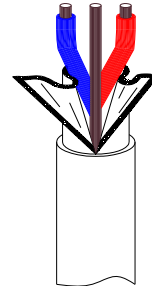

### Spiral/Serve

Spiral/Serve consists of 32 to 40 AWG copper strands (bare or tinned) in a helical shape around the cable or insulated conductors in a flat ribbon configuration. This type of shielding can give you up to 97 percent coverage. The advantage of this type of shielding is its superior flexibility, flex life, and ease of termination. Although it does not have the tensile strength of braid, the benefits are less copper, much faster to manufacturer, and can give you a smaller cable diameter. Generally spiral shields are not used above audio frequencies because of coil effect produced by the inductance or retractile cables.

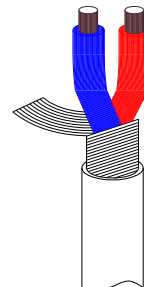

[Return to Top](#)



# Fire / Flame Tests and Ratings


<http://www.intercon-1.com>

Customers of wire and cable should be aware of the latest regulations and the products that meet these standards. Many tests have been developed to measure the flame resistance of wire and cable products. Flame resistance of a cable is frequently defined as the ability to stop burning once the source of heat is removed. Here is a brief summary of the most widely used North American fire tests and ratings.

## Vertical Tray Flame Test

### UL 1581 / IEEE 383

This test is performed on cables attached to a 1ft wide and 8 ft tall vertical metal ladder tray. The source of combustion is a 10 inch ribbon burner with an air/propane mixture which will supply approximately 70,000 BTU's per hour. The flame is applied for 20 minutes, 24 inches from the bottom of the cable. This rating requires the cable to self-extinguish prior to reaching the top of the tray.

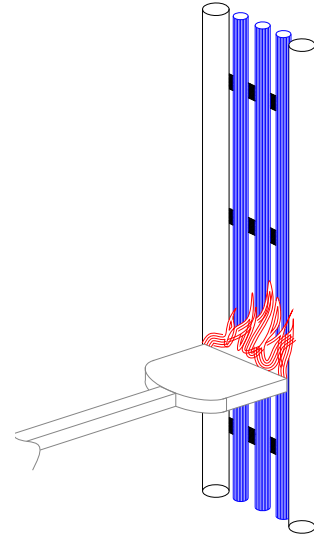

### CSA FT-4

This test is a later generation of the IEEE 383 test and is generally considered more stringent. To pass this test the resulting char distance must not be greater than 1.5 meters.

### IEEE 1202

The IEEE 1202 flame test is the newest version of the original IEEE 383 Flame Test. It is practically identical to the CSA FT-4 test

### UL 1685

The UL 1685 is fundamentally the UL 1581 test with smoke emission requirements. A cable passing this test can be given a 'Limited Smoke listing'.


### ICEA T-29-520

This is another variation of the UL 1581 / IEEE 383 except the BTU value is 210,000 instead of 70,000 and cable spacing increases.

## Vertical-Wire Flame Test

### UL 1581 VW-1

This was the first flame test developed for studying flame spread on wire and cable. The test is performed with a 24 inch wire or cable and a Tirrill burner. Two clamps hold the single sample vertically. The burner is mounted at a 20° angle and the inner flame can touch the samples surface. Flame is applied for 15 seconds and is then reapplied 4 more times each time the wire ceases to burn. If the sample does not burn longer than 60 seconds after any application, or if less than 25% of the indicator flag burns, or the cotton batting is ignited during the test, the cable passes. A "tray rated" cable must meet this test as well.

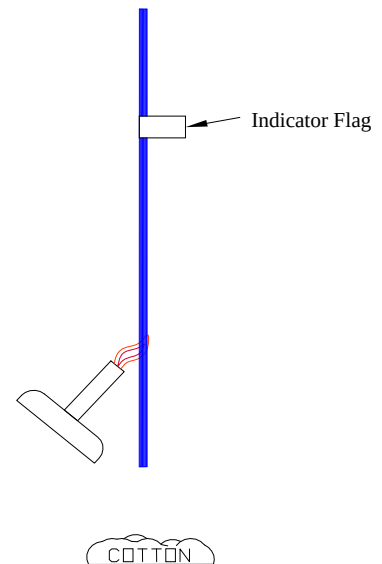

### CSA FT-1

This is the Canadian version of the VW-1 test.

[Return to Top](#)

# Flex Testing


## Reliability Tests for 4 basic kinds of flexing

High performance cable should be considered when specifying a cable for automation. Conductors under constant motion can break due to heat generated from friction. Just because a cable is very flexible does not mean it will have a long life. In some cases, a more rigid outer cable jacket allows the conductors to move more freely inside resulting in less friction. The outer jacket not only needs to withstand constant flexing but provide protection against mechanical abrasion and environmental conditions like: chemical, moisture, and temperature. If the cables components have been designed for increased flexibility, jacket material can be determined respective to these environmental conditions.

There are four basic types of flexing that most cables experience, they are: Bending, Rolling, Torsional, and Variable. These tests are basic guidelines to help with cable design associated to its function. Many cable manufactures have specific testing for their products. These examples are meant for a general understanding of basic flex testing

### Bend

Bend flexing is when the cable is flexed back and forth in one general place. This can come from many applications. Motion cameras are a very popular in this type of flexing. The cable is usually stationary while just behind the camera the cable will flex at the same place every time. This type of test is commonly referred to as "Tick Tock test" and "Flex test".

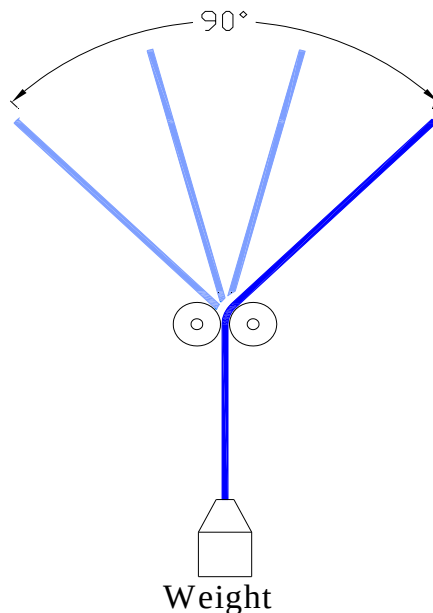


### Bend testing guidelines

The cable is affixed to a pendulum type device and weighted. The amount of weight and size of the bend radii is dependant on the size of cable and its inner conductors. Every conductor is monitored and in the event of a failure, the test automatically stops. The cable is then flexed back and forth and counted until there is a failure within the cable.

[Return to Top](#)

## Roll

Roll flexing is most common in automated equipment. The cable is harnessed in a flexible cable track and moved in a linear direction. This type of application will usually have an abrasion resistant jacket because of the constant rubbing against other wires, cables as well as the cable track itself. It is important to specify the correct cable to the bend radius of the cable track. A larger radius on the cable track can result in longer cable life. We offer customized flex testing services.

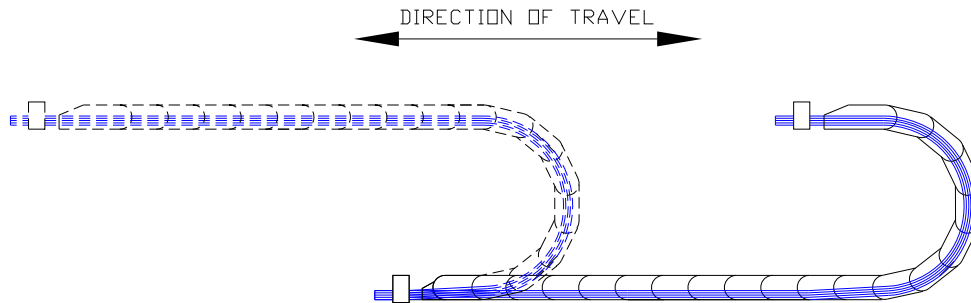


## Roll testing guidelines

The cable is installed and anchored within the cable track. Every conductor is monitored and in the event of failure, the test will stop. The cable track will be operated back and forth and counted until there is a failure within the cable.

## Torsional

Torsional flexing is when a cable twists around its axis'. This is common to robotic applications and hand held devices with a cord. It is one of the more demanding mechanical stresses. The strain created by the twisting motion is different than that of a bend or roll flex. Because of this, standard high flex cables may not be suitable for these applications. For maximum performance, a cable designed specifically for torsion should be utilized. We offer customized flex testing services.

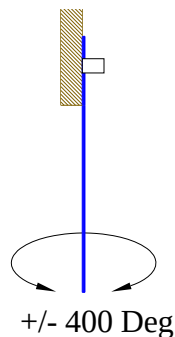


## Torsional testing guidelines

The cable is anchored to a surface and then twisted 400 degrees in each direction from its relaxed state. Test requirements may change slightly for cable design and function. Some alterations may include: adding weight, length of cable, or amount of twist. Every conductor is monitored and in the event of failure the test will stop.

[Return to Top](#)

## Variable

Variable flexing is when the cable is fixed in two positions and has the freedom to bend and move in any direction. This is usually found in robotic applications. With this freedom of movement, cable selection is critical.

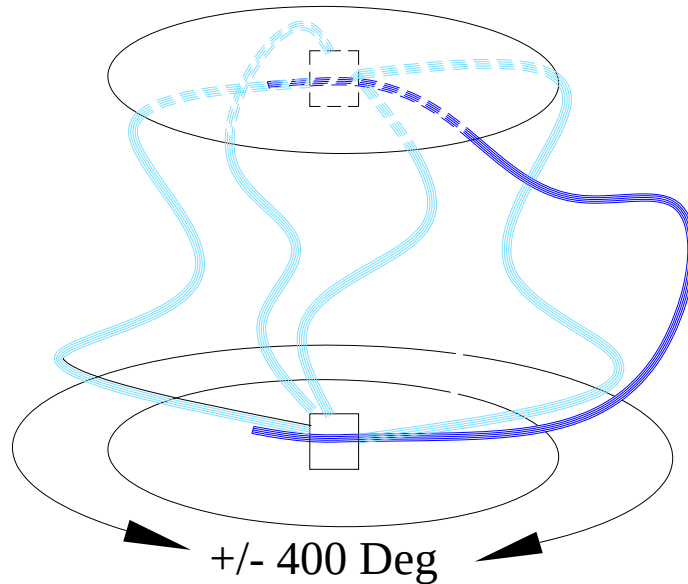

## Variable testing guidelines

The cable is anchored in two separate places and then one end is rotated up to 400 degrees in each direction from its relaxed state. Test requirements may change slightly for specific cable design. Some alterations may include: length of cable or amount of twist. Every conductor is monitored and in the event of failure the test will stop.

---

## General guidelines

Consider the applications voltage, current, bend radius, physical location, environmental conditions, and flex cycle when choosing a cable. This can increase the life cycle which results in less downtime and longer maintenance intervals.

When troubleshooting a deteriorated cable, there are a few general things to look for.

Twisted Cable Jacket- The outside jacket generally starts to twist when the internal conductors have begun to unwind due to improper cable selection, installation, or shielding

Outer Jacket Wear- Many times this is due to incorrect cable selection or installation. If the cable can contact any other surface while in motion, it will give opportunity for abrasion wear.

General Cable Failure- This happens most often because of harsh environmental conditions. The introduction to hazards like: moisture, welding spatter, oils, chemicals, temperature, and sunlight can degrade a cable assembly prematurely if it is not specified for the correct conditions.

[Return to Top](#)

# Installation Data for High-Flex Cable in a Cable Track

When selecting cable for cable track the following criteria should be taken into consideration:

## Environmental Conditions

Different materials are designed for different environmental conditions. The following list is some of the most common environmental conditions to be considered:

- Abrasives
- Acids
- Alcohols
- Alkali'
- Cold/Hot Temperatures
- Flame
- Indoor/Outdoor use
- Moisture
- Petroleum Products/Gasoline
- Oxidation
- Oils
- Ozone
- Sunlight

## Other Factors to Consider

- Traveling Speed and Distance
- Frequency of Operation
- Minimum Bend Radius
- Shielding



## Successful installation will greatly increase by following these guidelines:

1. Do not exceed the recommended minimum bend radius of the cable. This is based on a general application at a normal operating temperature. Many times a larger bend radius than the minimum will increase the service life of the cable.
2. Prepare the cable for torsion-free installation without twists, bends or kinks. Always unwind the cable from the outside layer of the reel or spool. Never pull a cable from a coil. Lay out the cable or hang it for 24 hours prior to installation. This will relax any remaining stresses resulting from production, transit, or storage. If the cable cannot be unstressed and still maintains a 'coil memory', shake it out by grasping the cable at its middle and vigorously shake the cable as you move to each end.
3. Once the cable is ready, wrap each end of the cable with non-residue producing identification tape and indicate the top of each cable end. Maintain this alignment throughout installation. This reduces the possibility of twist in the cable during installation.
4. Evaluate the weight and size of each cable. The cables, by weight, must be evenly distributed in the track. Place the heavier cables toward the outside of the track and the lighter ones toward the center. For a cable track that is side mounted, always place the larger cables toward the outside and the smaller cables toward the inside of the track.

[Return to Top](#)

5. Place the cables in the track in a 'working position' and loosely side by side. As a rule, allow at least 10% more of the cables diameter within the internal dimensions of the cable track. Do not weave the cables between or around other cables in the track. If spacers are provided in the track, separate the larger cables from smaller cables.

**Important** - Cables must not push tightly against the inner or outer curve of the track and never fasten cables to the track or each other.

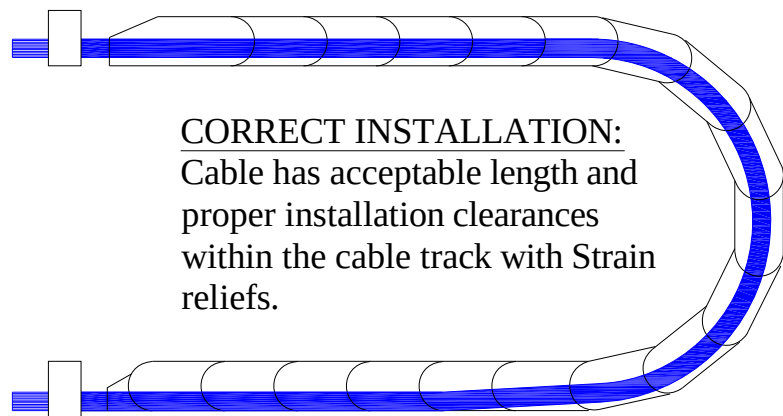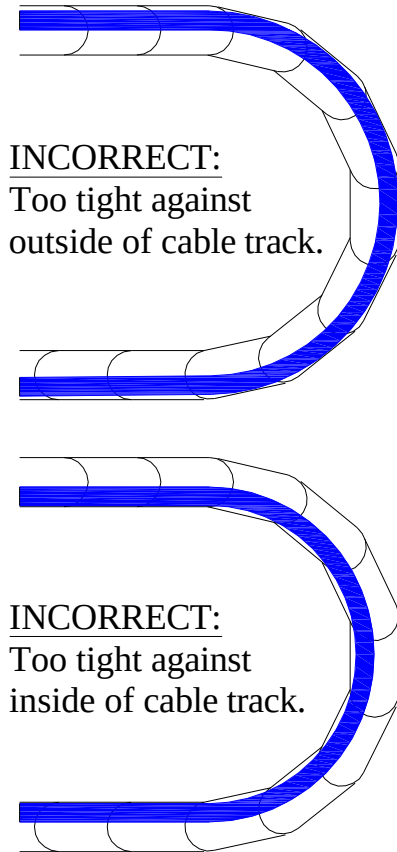

6. Locate the proper attachment points for saddle clamps and affix at both ends of the cable track. Do not over tighten. The purpose for saddle clamps is to distribute the pressure evenly over a larger area of the jacket which reduces the possibility of crushing the conductors.
7. After the cable is installed, it should be cycled through several flex operations. During these initial flex operations observe cable movement and check for freedom from binding, rubbing, and pulling. It is critical that all cables move with complete freedom, throughout the cable track.

[Return to Top](#)



# Index

## Index

| <u>PART NUMBER</u>          | <u>PAGE</u> | <u>PART NUMBER</u>  | <u>PAGE</u> |
|-----------------------------|-------------|---------------------|-------------|
| ABOUT US 1                  | 2           | IF-CLCP-xx-P        | 26          |
| ABOUT US 2                  | 3           | 38999               | 27          |
| ABOUT US 3                  | 4           | CLOL-xxx*           | 28          |
| BVCP-xx-P                   | 5           | F-GEVP-xx-P         | 29          |
| SVCP-xx-P                   | 6           | F-GEVPT-xx-P        | 30          |
| SVCP*-xx-P                  | 7           | F-GEVVPT-xx-P       | 31          |
| MCS-xx-P                    | 8           | F-GEVPT*-xx-P       | 32          |
| MVCP-xx-S                   | 9           | F-GEVVPT*-xx-P      | 33          |
| PVCS-xx-P                   | 10          | M128P               | 34          |
| VCP-xx-S                    | 11          | MIDAP-xx-PA         | 35          |
| VCS*-xx-P                   | 12          | MIDAP-xx-PB         | 36          |
| VCS*2-xx-P                  | 13          | MIDBP-xx-PB         | 37          |
| VCXS-xx-PJB                 | 14          | IF-MIDAPC-xx-PAC    | 38          |
| VCS-xx-B*                   | 15          | IF-MIDAPT-xx-PAT    | 39          |
| CXP-xx-P                    | 16          | IF-MIDAP-xx-PA      | 40          |
| Camera Link Product Outline | 17          | F-FWBPT-xx-PA6      | 41          |
| Camera Link Cable Options   | 18          | F-FWBPT-xx-PB       | 42          |
| CLCP                        | 19          | F-FWBPT-xx-PBT      | 43          |
| MCLCP                       | 19          | IF-B2PA-xx-PA       | 44          |
| POCLP                       | 20          | GPIO-xx-PS          | 45          |
| POMCLP                      | 20          | RHC*P-**-P          | 46          |
| CLCP*-xx-R                  | 21          | WIPS-xxx-xx         | 47          |
| MCLCP*-xx-R                 | 21          | PSI-xxx-xx          | 48          |
| POCLLP                      | 22          | DPS-xxx-xx          | 49          |
| POCLLP*-xx-R                | 22          | IPS-xxx-xx          | 50          |
| POCLLP-xx-LP                | 23          | Termination options | 51          |
| ECLP-xx-P                   | 24          | Custom Capabilities | 52          |
| X4PT-xx-X4PT                | 25          |                     |             |

## Reference Information

|                           |    |                              |    |
|---------------------------|----|------------------------------|----|
| Camera Link Overmold Dims | 54 | Fire/Flame Tests and Ratings | 57 |
| Circular Conn Orientation | 55 | Flex Testing                 | 58 |
| Cable Guide               | 56 | Cable Track Installation     | 59 |

Notes: \_\_\_\_\_

Notes: \_\_\_\_\_

Notes: \_\_\_\_\_